

QSG144: CP2615-EK2 Quick-Start Guide

The Silicon Labs CP2615 Digital Audio Bridge Evaluation Kit is designed to enable rapid development of mobile audio accessories and USB digital audio products using the CP2615 Digital Audio Bridge.

The CP2615 provides built-in support for USB digital audio streaming and HID user-interface functions for transport control buttons. It also provides an I/O protocol to allow host applications access to GPIO, ADC, and serial interfaces. The CP2615 is designed to operate with any USB host that supports USB Audio class 1.0. No firmware development is required to use the CP2615, and it has many custom options that can be configured using a GUI configuration tool.

The CP2615-EK2 kit includes the following:

- CP2615 Audio Bridge evaluation board
- 1 x Micro USB OTG adapter
- 1 x USB Type-C to USB-A adapter
- 1 x mini USB cable
- 1 x micro USB cable
- Quick-Start Card

KEY FEATURES

- USB Audio class 1.0
- Supports USB HID Consumer Controls for Volume and Mute Synchronization
- Includes USB-UART bridge function
- Supports 48 kHz,16-bit/ 24-bit stereo digital audio
- Integrated USB transceiver; no external resistors required
- Integrated clock; no external crystal required
- On-chip voltage regulator: 3.45 V output
- · Self-powered or Bus-powered
- · No firmware development



1. Getting Started

1. Set Up Your Kit

Connect the USB micro cable to [J11] of the CP2615-EK2 board. Depending on the type of recepticle on your phone, attach either the micro OTG adapter or the USB Type-C adapter to the other end of the USB cable. Then, connect the other end of the adapter to your Android phone.





Micro OTG Adapter Cable

USB Type-C Adapter Cable

The Micro USB OTG adapter is for phones that use a micro connector. The USB Type-C adapter is for phones that use a USB Type-C connector.

2. Listen to Audio

Connect headphones (J8) to the CP2615 board and use your favorite Android audio application to play music.



3. Control the Audio

Use the buttons to control volume, play and pause the music, and skip ahead or skip back.

Gine Contraction C	J12 J4 5V VREC	TP2 TP1 TP9 EN J21 CP2615 USB-to-I J21 STANDBY		
VDD GPI09 GPI07 GPI06 GPI05 GPI04 GPI03	BOT J2 VDD SVD SVD SVD SVD SVD SVD SVD SVD SVD	GND CFGMODE 125 SOLK RESET 125 SDIN IZ SC 125 SDIN IZ SC 125 SDIN IZ SC 125 SDOUT IZ SD 126 SDA 126 SOL 125 LRCLK 125 LRCLK 125 LRCLK MIC_IN_L		
GPI03 GPI02 GPI01 GPI09 GPI09 GPI09 J6 PRE	CP2515 R6 M	EXT 1011 MIC_IN_R GPI012 GPI013 GPI017 GPI017 GPI017 GPI017 GPI017 GPI01 GPI01 GPI01 GPI01 GPI01 GPI01 GPI01 GPI012 GP		et 🥯
55	56 54 VOL- 53		HEAD	

2. Resources

Xpress Configurator

The CP2615 device can be configured by using the [Xpress Configurator] tool within Simplicity Studio.



Kit Documentation and User's Guide

Kit documentation like the schematic and detailed board user guide can be found using the [Documentation] area of the Simplicity Studio launcher.

Launcher - Simplicity Studio ~				
e Edit Navigate Search Project Run Window Help				
nIn ▼☆ Ł	Search	J~ Tools		🖹 👘 Lee
Devices: 2 🛱 Solutions 👘 🗖				
🍫 🐸 🗹 🛪 🌾 🛅	EFM8BB1 Busy B	ee Starter Kit		ی سر ا
J-Link Silicon Labs (440060870) Silicon EBB1 Busy Bee Starter Kit	Preferred SDK: 8051 SDK v4.0.0 Click he			ليو ا
EFM8881 Busy Bee Starter Kit Board (BRD5200A)				1 3 7
No name (10.12.24.49)	Debug Mode: MCU	change		
	Adapter Firmware Version: 0v14p1b450	No local adapter firmware available. C	ick <u>here</u> to downic	
	Getting Started Docu	mentation Compatibl	e Tools Reso	ources
	EFM8BB1 Busy Bee Starter Kit			
	BRD5200A_A01_assy_draw	BRD5200A_A01_bom	BRD52004	atic
	EFM8BB1_datasheet	EFM8BB1-SLSTK2020A-Quick!	EFM8BB1-SLST	020A-UserGi
BRD5200A	EFMIDBL_datasheet		FFM88B1-SLST	020A-UserGi

Application Notes

Application Notes on peripherals and other various topics can be accessed using the [Getting Started]>[Software Examples] area of the launcher.

🛃 Launcher - Simplicity Studio ~			- 0
File Edit Navigate Search Project Run Window Help			· · · · · · · · · · · · · · · · · · ·
Sign In 👻 🔅 🚊	Search	& Tools	😢 👘 🖬
Image: Second	Preferred SDK: 8051 SDK v4.0.0 Cli Debug Mode: MCU	Bee Starter Kit ck here to change the preferred SDK. change 0450 No local adapter firmware available. Clic	k here to downic
-		ocumentation Compatible	Tools Resources
		Software Examples	Application Notes
	Demos View Al	Software Examples	Application Notes
	EFM8BB1 CPT007B Demo 🕟	EFM8BB1 ADC ExternalInput	AN111 U: Dox in 5
	This example project uses the EFM8 LCD to demonstrate the use of	This example code takes and averages 2048 analog measurements from input P1.7 using	
			AN114 Hand S dering Tutor
		EFM8BB1 ADC Lib Accumulate	AN119 Calcula ng Settling T
		peripheral driver library to sample	Antis culcul ig setting i
pplication Not	es V	EW All C Lib Interrupt	AN124 Pin Shang Techniqu
pp		trates using the EFM8 yrary to sample	
			AN136 Produc on Programm
		it sterrupt Lo 🛤	
		to sample	x Printed Cir
N111 Using C805	LFxxx in 5		6
-		Б. I.	siLu
		12	
		1 1	
Hand Solde	ring T	125	

Community and Support

Have a question? Visit the community by clicking the [Resources]>[Silicon Labs Community] area of the launcher.







Simplicity Studio

One-click access to MCU and wireless tools, documentation, software, source code libraries & more. Available for Windows, Mac and Linux!







slifty

Support and Community community.silabs.com

Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Labs shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.

Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, Clockbuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, ISOmodem®, Micrium, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, Z-Wave, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701 USA

http://www.silabs.com