

BlueMod+S/Al Hardware User Guide

1VV0301275 Rev. 8 - 2017-06-07





SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

NOTICE

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

COPYRIGHTS

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

COMPUTER SOFTWARE COPYRIGHTS

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



USAGE AND DISCLOSURE RESTRICTIONS

I. License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

II. Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

III. High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

IV. Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

V. Third Party Rights

The software may include Third Party Right software. In this case you agree to comply with all terms and conditions imposed on you in respect of such separate software. In addition to Third Party Terms, the disclaimer of warranty and limitation of liability provisions in this License shall apply to the Third Party Right software.

TELIT HEREBY DISCLAIMS ANY AND ALL WARRANTIES EXPRESS OR IMPLIED FROM ANY THIRD PARTIES REGARDING ANY SEPARATE FILES, ANY THIRD PARTY MATERIALS INCLUDED IN THE SOFTWARE, ANY THIRD PARTY MATERIALS FROM WHICH THE SOFTWARE IS DERIVED (COLLECTIVELY "OTHER CODE"), AND THE USE OF ANY OR ALL THE OTHER CODE IN CONNECTION WITH THE SOFTWARE, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

NO THIRD PARTY LICENSORS OF OTHER CODE SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND WHETHER MADE UNDER CONTRACT, TORT OR OTHER LEGAL THEORY, ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE OTHER CODE OR THE EXERCISE OF ANY RIGHTS GRANTED UNDER EITHER OR BOTH THIS LICENSE AND THE LEGAL TERMS APPLICABLE TO ANY SEPARATE FILES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

APPLICABILITY TABLE

PRODUCTS

- ■ BLUEMOD+S/TIO
- BLUEMOD+S/CENTRAL
- ■■ BLUEMOD+S/ADC



Contents

NOTICE	2
COPYRIG	HTS2
COMPUTE	ER SOFTWARE COPYRIGHTS2
USAGE AI	ND DISCLOSURE RESTRICTIONS
l.	License Agreements
II.	Copyrighted Materials
III.	High Risk Materials3
IV.	Trademarks
V.	Third Party Rights
APPLICAE	BILITY TABLE4
CONTENT	S5
1.	INTRODUCTION
1.1.	Scope
1.2.	Audience9
1.3.	Contact Information, Support
1.4.	Text Conventions 10
1.5.	Related Documents
2.	OVERVIEW 12
2.1.	Feature Summary
2.2.	Applications
2.2.1.	General Cable Replacement
2.2.2.	Industry14
2.2.3.	POS/Advertising
2.2.4.	Healthcare and Medical
2.2.5.	Sports and Fitness
2.2.6.	Entertainment
3.	BLOCK DIAGRAM15
4.	APPLICATION INTERFACE
4.1.	Power Supply
4.2.	Power-up Slew Rate
4.3.	Reset



4.4.	Serial Interface	19
4.4.1.	4-Wire Serial Interface	20
4.4.2.	UART Example Circuits	21
4.4.3.	Baud Rate Deviation	22
4.4.4.	Dynamic I/O Signal Type Changes depending on the UICP statu	ıs22
4.5.	GPIO Interface	23
4.6.	I ² C Interface	23
4.7.	SPI Serial Peripheral Interface	24
4.8.	Bluetooth Radio Interface	24
4.9.	Slow Clock Interface	24
4.9.1.	SLCK Specification (External Supplied Signal)	24
4.9.2.	32,768 kHz Crystal Oscillator Specification (32k XOSC)	25
4.9.3.	Connection of an External 32,768 kHz Crystal	25
4.10.	Test Mode	26
4.11.	Operating in a Power Switched Environment	27
4.12.	Serial Wire Debug Interface	27
4.13.	DC/DC Converter	28
5.	MODULE PINS	29
5.1.	Pin Numbering	29
5.2.	General Pin Description	30
5.3.	Application Specific TIO Pin Configuration	32
5.4.	Application Specific ADC Pin Configuration	34
5.5.	Handling of Unused Signals	35
6.	ELECTRICAL CHARACTERISTICS	36
6.1.	Absolute Maximum Ratings	36
6.2.	Operating Conditions	36
6.3.	Environmental Requirements	36
6.4.	DC Parameter	37
6.4.1.	General Purpose I/O (GPIO)	37
6.4.2.	EXT-RES#	38
6.4.3.	External Slow Clock SLCK	38
6.4.4.	Analog Digital Converter (ADC)	39
6.4.4.1.	Input Voltage Range	39
6.4.4.2.	ADC Reference Voltage	39
6.4.4.3.	Analog ADC Input AIN	39
6.5.	Power Consumption and Power Down Modes	40
6.5.1.	Terminal I/O Configuration	40
1\/\/0301275	Rev. 8 Page 6 of 72	

6.6.	RF Performance	42
6.6.1.	BLE Receiver	42
6.6.2.	BLE Transmitter	43
6.6.3.	Antenna Gain and Radiation Pattern	44
6.7.	Power-Up Time	46
7.	MECHANICAL CHARACTERISTICS	47
7.1.	Dimensions	47
7.2.	Recommended Land Pattern	47
7.3.	Re-flow Temperature Time Profile	48
7.4.	Placement Recommendation	49
7.5.	Housing Guidelines	49
7.6.	Antenna Issues	49
7.7.	Safety Guidelines	50
7.8.	Cleaning	50
8.	APPLICATION DIAGRAM	51
9.	APPROVALS/CERTIFICATIONS	52
9.1.	Declaration of Conformity CE	52
9.2.	FCC Compliance	52
9.2.1.	FCC Grant	53
9.2.2.	FCC Statement	53
9.2.3.	FCC Caution	54
9.2.4.	FCC Warning	54
9.2.5.	FCC RF-exposure Statement	54
9.2.6.	FCC Labeling Requirements for the End Product	54
9.3.	IC Compliance	55
9.3.1.	IC Grant	55
9.3.2.	IC Statement	56
9.3.3.	IC Caution	56
9.3.4.	IC RF-exposure Statement	56
9.3.5.	IC Labeling Requirements for the End Product	56
9.3.6.	IC Label Information BlueMod+S	57
9.4.	KC Certification	58
9.4.1.	KC Certificate	58
9.5.	MIC Certification	59
9.5.1.	MIC Certificates	60
9.6.	Anatel Certification	61

Australian RCM Mark	. 62
Bluetooth Qualification	. 63
RoHS Declaration	. 64
PACKING	. 65
Tape&Reel Packing	. 65
Tape	. 66
Reel	. 66
Tray Packing	. 67
Module Orientation	. 67
Tray Dimension	. 67
Moisture Sensitivity Level	. 67
EVALUATION KIT	. 68
SAFETY RECOMMENDATIONS	. 69
READ CAREFULLY	. 69
DOCUMENT HISTORY	. 70
	Australian RCM Mark Bluetooth Qualification RoHS Declaration PACKING Tape&Reel Packing Tape Reel Tray Packing Module Orientation Tray Dimension Moisture Sensitivity Level EVALUATION KIT SAFETY RECOMMENDATIONS READ CAREFULLY DOCUMENT HISTORY



1. INTRODUCTION

1.1. Scope

This document provides information how the BlueMod+S/AI can be integrated into customer systems. It addresses hardware specifications of the BlueMod+S/AI and requirements of the hardware environments for the BlueMod+S/AI.

1.2. Audience

This document is intended for Telit customers, especially system integrators, about to implement Bluetooth modules in their application.

1.3. Contact Information, Support

For general contact, technical support services, technical questions and report documentation errors contact Telit Technical Support at:

- TS-EMEA@telit.com
- TS-AMERICAS@telit.com
- TS-APAC@telit.com

OI

TS-SRD@telit.com for global Bluetooth support

Alternatively, use:

http://www.telit.com/support

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

http://www.telit.com

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.



1.4. Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.



1.5. Related Documents

- [1] nordic: nRF51_Series_Reference_Manual_v3.0.pdf (nRF51822_Reference)
- [2] nordic: nRF51822_PS v3.1.pdf (nRF51822_Datasheet)
- [3] UICP+ UART Interface Control Protocol, 30507ST10756A
- [4] Application Note B0601 on Antenna Design
- [5] BlueMod+S AT Command Reference, 80507AT10751A
- [6] BlueMod+S Testmode Reference
- [7] Bluetooth 4.1 Core Specification



2. OVERVIEW

This document provides information how the BlueMod+S/AI can be integrated into customer systems. It addresses hardware specifications of the BlueMod+S/AI and requirements of the hardware environments for the BlueMod+S/AI.



The term BlueMod+S refers to the BlueMod+S/AI and is used as an abbreviation.

The BlueMod+S is delivered in two different hardware versions: with (as of Q4/2015) and without (until Q4/2015) DC-DC converter on the module. Wherever required the variant with DC-DC is named BlueMod+S/DC-DC in this document. Furthermore a firmware version V2.xxx or newer is required to support the DC-DC converter.

For detailed information about software interfaces refer to [5].

For the latest version of this document please check the following URL:

http://www.telit.com/bluetooth/bluemod-s/



The integration of the BlueMod+S module within user application shall be done according to the design rules described in this manual.

The information presented in this document is believed to be accurate and reliable. However, no responsibility is assumed by Telit Communications S.p.A. for its use, nor any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Telit Communications S.p.A. other than for circuitry embodied in Telit products. This document is subject to change without notice.



2.1. Feature Summary

- Bluetooth specification V4.1 compliant
- Supports Bluetooth low energy
- Fully qualified Bluetooth V4.1 Single Mode LE
- CE certified
- FCC and IC certified
- KCC certified
- Nordic nRF51822 inside
- Fast Connection Setup
- RF output power -30 up to +5dBm EIRP
- RSSI detector on board
- High sensitivity design
- Supply voltage range 1,8V to 3,6V
- Internal crystal oscillator (16 MHz)
- LGA Surface Mount type. BlueMod+S: 17 x 10 x 2.6 mm3
- Pin compatible to Telit's BlueMod+SR dual mode module
- Shielded to be compliant to FCC full modular approval
- Flexible Power Management
- 128-bit AES encryption
- High-speed UART interface
- I2C Master
- SPI Master/Slave interface
- Low power comparator
- Real Time Counter
- Up to 19 digital IO's for individual usage by embedded software
- Up to 6 analog inputs for individual usage by embedded software
- 8/9/10bit ADC
- Arm® CortexTM-M0 core for embedded profiles or application software
- Manufactured in conformance with RoHS2
- Operating temperature -25 ... +75 °C
- Weight: 0,7 g

2.2. Applications

The BlueMod+S is designed to be used in low power applications, like sensor devices. Some typical applications are described in this chapter.

Supported profiles are:

- Terminal I/O
- GATT based LE profiles



Support for any additional profile is possible on request.



2.2.1. General Cable Replacement

In case there is no standardized application specific profile available the BlueMod+S offers Telit's Terminal I/O profile, which allows transparent data transfer over UART and supports Secure Simple Pairing, making the pairing process easy and the connection secure. Terminal I/O is available for iOS and Android as well as implemented in the dual mode module BlueMod+SR.

2.2.2. Industry

BlueMod+S can be used to monitor and control motors, actuators, values and entire processes.

2.2.3. POS/Advertising

BlueMod+S supports iBeacon or similar applications.

2.2.4. Healthcare and Medical

Usage of Bluetooth is aimed mainly at devices that are used for monitoring vital data. Typical devices are blood glucose meter, blood pressure cuffs and pulse ox meters. Bluetooth BR/EDR and low energy were chosen by the Continua Health Alliance as transports for interoperable end to end communication.

2.2.5. Sports and Fitness

In the sports and fitness segment the BlueMod+S is used in devices for positioning as well as monitoring vital data. Typical devices in this market are heart rate monitors, body temperature thermometers, pedometers, cadence meters, altimeter, positioning / GPS tracking and watches displaying information from sensors.

2.2.6. Entertainment

Bluetooth technology is already used in a wide variety of devices in the entertainment sector, namely set-top boxes / gaming consoles. BlueMod+S is especially suited for use in remote controls, gaming controller and wireless mouse/keyboard applications.



3. BLOCK DIAGRAM

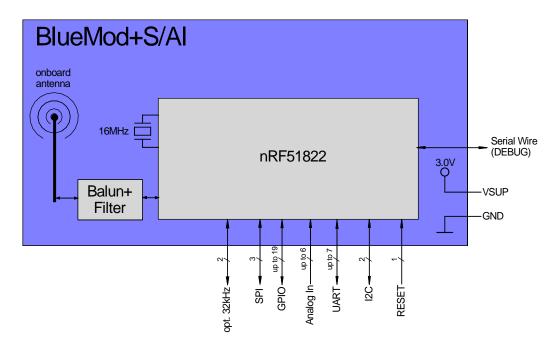


Figure 1: BlueMod+S/Al Block Diagram



4. APPLICATION INTERFACE

4.1. Power Supply

BlueMod+S require a power supply with the following characteristics:

Typical: $3.0V_{DC}$, min.: $1.8V_{DC}$, max.: $3.6V_{DC}$, thereby delivering > 25 mA peak

BlueMod+S is designed to be powered from 3V coin cell batteries e.g. CR2032 directly, or any other power source complying with the given requirements. For optimal performance a stable supply is recommended. Furthermore it is recommended to place a capacitor in parallel to the CR2032 3V coin cell battery in order to prolong battery lifetime, by compensating the effects of the rising source resistance of the battery to pulsed loads.

Since the isolation resistance of this capacitor will discharge the battery in a not insignificant scale, the capacitor should be chosen under consideration of the following rules:

- capacitance as small as necessary
- nominal voltage as high as possible
- case size as large as possible
- use X7R instead of X5R

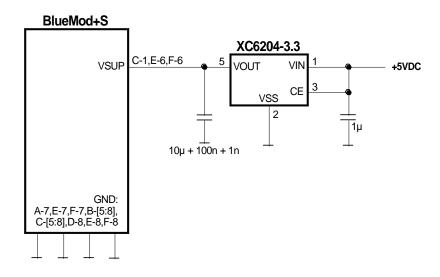


Figure 2: BlueMod+S example power supply with LDO

4.2. Power-up Slew Rate

Table 1: Power up rise time requirements

Parameter	Min	Max	Unit
VSUP rise time rate (1), (2)	0	100	ms

 $^{^{(1)}}$ 0V to VDDV

⁽²⁾ The on-chip power-on reset circuitry may not function properly for rise times outside the specified interval



4.3. Reset


BlueMod+S are equipped with circuitry for generating power-up reset from the supply voltage VSUP, as well as brownout detection.

During power-up, reset is kept active until the supply voltage VSUP has reached the minimal operating voltage. VSUP rise time has to comply with Table 1 for power-up reset to function properly. A reset is also generated when VSUP falls below the threshold of the brownout detector (1,6V ... 1,7V with a hysteresis of about 30mV), and is released when VSUP rises above that threshold.

By holding pin B-1 (EXT-RES#) at \leq VSUP*0,3V for $t_{HOLDRESETNORMAL} \geq$ 0,2 μ s, an external reset (*pin reset*) is generated. This pin has a fixed internal pull-up resistor (R_{PU} = 11 $k\Omega$... 16 $k\Omega$). EXT-RES# may be left open if not used.



The reset-functionality associated with pin EXT-RES# is shared with the serial wire debug feature (refer to 4.12). Inside the BlueMod+S module, EXT-RES# is connected to SWDIO via a 150R resistor. During a debug session the external reset function is not available; asserting of EXT-RES# to any level should be avoided.

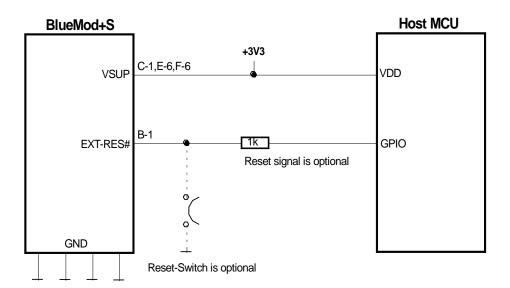

Please Note: BlueMod+SR has an open-drain output and approx. 40k internal pullup

Figure 3: BlueMod+S example reset



The following table shows the pin states of BlueMod+S during reset active.

Table 2: Pin states during reset

Pin Name	State BlueMod+S	
EXT-RES#	Input with pull-up (1)	
XL-IN/SLCK	Input floating (disconnected)	
XL-OUT	Input floating (disconnected)	
UART-TXD	Input floating (disconnected)	
UART-RXD	Input floating (disconnected)	
UART-RTS#	Input floating (disconnected) with pull-up resistor 470k $\!\Omega^{(2)}$	
UART-CTS#	Input floating (disconnected)	
IUR-OUT#	Input floating (disconnected)	
IUR-IN#	Input floating (disconnected)	
GPIO[0:14]	Input floating (disconnected)	
TESTMODE#	Input floating (disconnected)	
BOOT0	Input floating (disconnected)	
SWDIO	Input with pull-up (1)	
SWCLK	Input with pull-down (1)	

 $^{^{(1)}}$ pull-up, pull-down: $R_{PU},\,R_{PD}$ is typ. $13k\Omega$ (11k Ω to $16k\Omega)$

The pin states as indicated in Table 2 are kept until hardware initialization has started.

⁽²⁾ a discrete resistor is used



4.4. Serial Interface

The serial interface of BlueMod+S is a high-speed UART interface supporting RTS/CTS flow control and interface-up/down mechanism according to the UICP+ protocol (refer to [3]). Electrical interfacing is at CMOS levels (defined by VSUP; see chapter 6.4.1).

- Transmission speeds are 9600 921600 bps and 1 Mbps (asynchronous)
- Character representation: 8 Bit, no parity, 1 stop bit (8N1)
- Hardware flow-control with RTS and CTS (active low)



Transmission speed may be limited by firmware. See corresponding command reference [5] for further information.

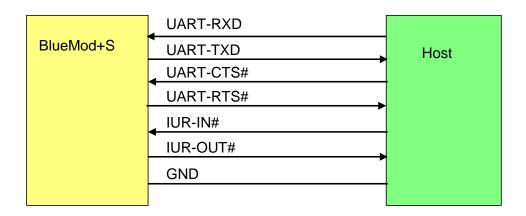


Figure 4: Serial interface signals

The basic serial interface (with RTS/CTS flow control) uses only four signal lines (UART-RXD, UART-TXD, UART-CTS#, UART-RTS#) and GND. IUR-IN#, IUR-OUT# and GPIO[4] (see below) can be left unconnected.

A substantially saving of power during idle phases can be achieved (see 6.5.1) when the UICP protocol is used (refer to [3]). This protocol should be implemented on the host side as well. Signals IUR-IN# and IUR-OUT# should be connected to the host (see Figure 4) and may be mapped to DSR and DTR, if an RS232-style (DTE-type) interface is used (see Figure 6).



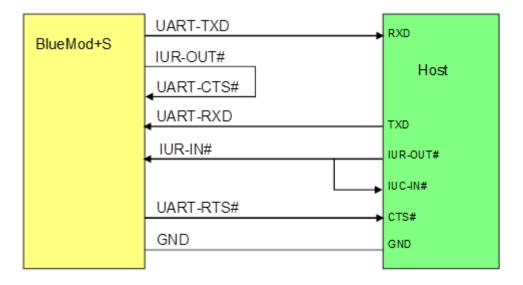


Figure 5: 5-wire interface supporting UICP (minimum signals needed)

Figure 5 shows the minimal configuration to use UICP for both directions RxD and TxD. To use this scheme, the user has to implement UICP on host side for the transmitter only to wake up the BlueMod+S receiver.

When using the TIO firmware and applications, call control can be supported by GPIO[4]. Driving GPIO[4] to logic High level during a data transfer phase will "hang up" the connection and disconnect the Bluetooth link. This signal may be mapped to DSR, if an RS232-style (DTE-type) interface is used. Please refer to [5] for a functional specification. GPIO[4] can be left unconnected if this feature is not used.

4.4.1. 4-Wire Serial Interface

If the host in question is sufficiently fast, a four-wire scheme may be successful. Connect the serial lines UART-RXD, UART-TXD as well as UART-RTS# and GND; leave UART-CTS# open. The host is required to stop sending data within a short time after de-assertion of UART-RTS# (there is room for up to 4 more characters at the time RTS# drops).



UICP has to be deactivated permanently in this configuration, because signal UART-CTS# and IUR-IN# become inputs with no PU or PD if UICP is active. This would cause floating CMOS inputs.



It is strongly recommended to use hardware flow control in both directions. Not using flow control can cause a loss of data.



4.4.2. UART Example Circuits

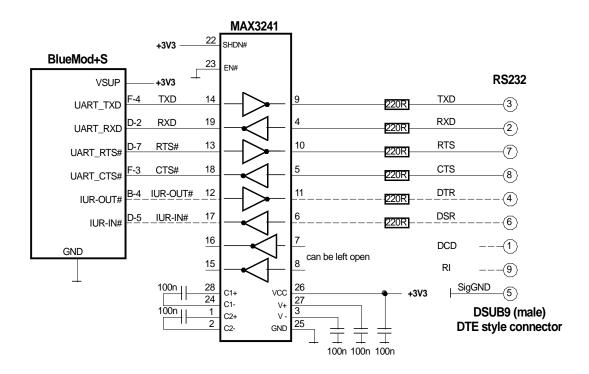


Figure 6: BlueMod+S example serial interface (RS-232) supporting UICP

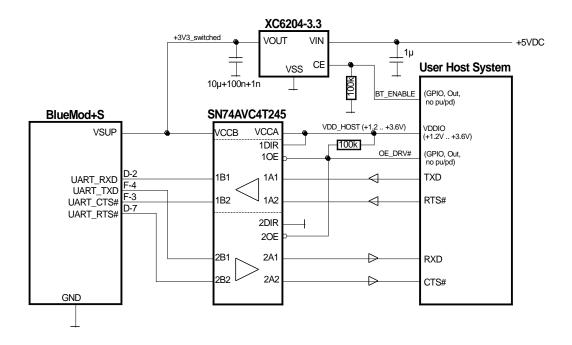


Figure 7: BlueMod+S example serial interface (mixed signal level)



4.4.3. Baud Rate Deviation

The following table shows the deviation in percent of the standard data rates. The deviation may be caused by the inaccuracy of the crystal oscillator or granularity of the baud rate generator.

Table 3: Deviation of baud rates

Data rate (bit/s)	Deviation (%)
9600	
19200	
38400	
57600	
115200	±1%
230400	
460800	
921600	
1000000	



The total deviation of sender and receiver shall not exceed 2.5% to prevent loss of data.

4.4.4. Dynamic I/O Signal Type Changes depending on the UICP status

In order to allow customers to use the serial interface with the minimal signal count on the one side and to reduce current consumption when using UICP on the other side, the BlueMod+S FW supports the following dynamic I/O signal type changes depending on the UICP activated resp. deactivated status.

Signal	gnal UICP deactivated	
UART-CTS#	I-PD	I-FLOAT
IUR-IN#	I-DIS	I-FLOAT
IUR-OUT#	I-DIS	O-PP

 $\label{lower} \mbox{Legend: I-PD = Input with pull-down resistor, I-DIS = Input disconnected,} \\ \mbox{I-FLOAT = input floating, O-PP = Output push-pull}$

Signal types I-PD, I-DIS and O-PP may be left open. I-FLOAT has to be driven to GND or VCC to avoid open CMOS input oscillation.

If UICP is deactivated the pull-down resistor on UART-CTS# helps to keep the serial interface active if UART-CTS# is open.



If UICP is active and the serial interface is down, UART-CTS# has to be held at VCC and the pull-down would cause an unwanted constant current drain. Therefore it is switched off in this mode.

4.5. **GPIO** Interface

It is possible to use the programmable digital I/Os GPIO[0:14] on the BlueMod+S. Their behavior has to be defined project specific in the firmware.

Unused GPIO pins shall be left unconnected to stay compatible. There may be functions assigned to some in future versions of the firmware.

I²C Interface ¹ 4.6.

The I2C bus interface serves as an interface between the internal microcontroller and the serial I²C bus. BlueMod+S is the master and controls all I²C bus specific sequencing, protocol and timing. It supports standard (100kHz) and fast (400kHz) speed modes. The BlueMod+S as an I²C master must be the only master of the I²C bus (no multimaster capability). Clock stretching is supported.

GPIO[1]/I2C-SDA and GPIO[0]/I2C-SCL can be used to form an I²C interface. It is required to connect 4k7 pull-up resistors on I2C-SCL and I2C-SDA when this interface is used.

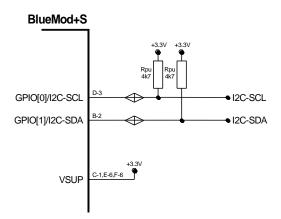


Figure 8: BlueMod+S I²C interface



4.7. SPI Serial Peripheral Interface ²

The serial peripheral interface (SPI) allows for full-duplex, synchronous, serial communication with external devices. The interface can be configured as the master and then provides the communication clock (SCK) to the external slave device(s), or as the slave. The SPI Interface supports SPI-modes 0 through 3.

Module pins are used as follows:

GPIO[2]: SPI-MOSIGPIO[5]: SPI-MISOGPIO[8]: SPI-SCK

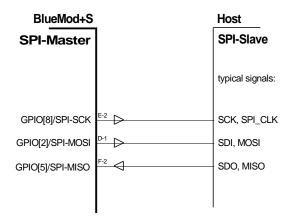


Figure 9: BlueMod+S SPI interface (example: Master mode)

4.8. Bluetooth Radio Interface

The BlueMod+S/AI presents an integrated ceramic antenna. It is highly recommended that you follow the design rule given in the Telit Application Note on antenna design [4].

4.9. Slow Clock Interface

Even though an external slow clock is not required for BLE operation, consumption of power during power-down modes can be reduced by feeding the module with an optional 32,768 kHz slow clock at pin XL-IN/SLCK, or connecting an XTAL (32,768kHz) and two capacitors C1, C2 at pins XL-IN and XL-OUT.

4.9.1. SLCK Specification (External Supplied Signal)

- 32,768 kHz +/-250ppm; duty cycle 30...70%.
- Signal may be a sine wave, a clipped sine wave, a square wave or a rail-to-rail digital signal. The amplitude must be at least 200mV_{pp}. DC offset is not an issue as long as the input voltage is between VSS and VSUP at all times.
- connect signal SLCK to XL-IN/SLCK (A6) and leave XL-OUT (A5) open

² subject to firmware support, contact Telit for current status 1VV0301275 Rev. 8 Page **24** of **72**



4.9.2. 32,768 kHz Crystal Oscillator Specification (32k XOSC)

Table 4: 32,768 kHz crystal oszillator

Symbol	Item	Condition	Limit		Unit	
			Min	Тур	Max	
f _{NOM}	Crystal Frequency	T _{amb} = 25°C		32,768		kHz
f _{TOL}	Frequency Tolerance for BLE applications	including temperature and aging ⁽¹⁾			+/-250	ppm
CL	Load Capacitance			9	12,5	pF
C0	Shunt Capacitance				2	pF
Rs	Equivalent Series Resistor			50	80	kΩ
PD	Drive Level				1	μW
Cpin	Input Cap. on XL-IN and XL-OUT			4		pF

⁽¹⁾ adjust crystal frequency by choosing correct value for C1, C2 (value depends on C_L of crystal and layout)

The module's firmware will detect the presence of a slow clock during the boot process and switch behavior appropriately.

4.9.3. Connection of an External 32,768 kHz Crystal

Connect the 32,768 kHz crystal and two capacitors C1, C2 at pins A-6 (XL-IN/SLCK) and A-5 (XL-OUT). The crystal has to comply with specifications given in Table 1. The exact value of C1 and C2 depends on the crystal and the stray capacitance of the layout. Select C1, C2 such that the slow clock oscillator operates at the exact frequency at room temperature (25°C). C1 and C2 shall be of equal capacity. The crystal and the capacitors shall be located close to pins A-5, A-6. Avoid long signal traces.

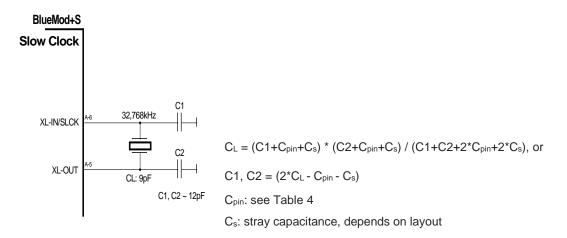


Figure 10: BlueMod+S connection of external XTAL



4.10. Test Mode

For homologation purposes the ability of test mode operation like "BlueMod+S Testmode" or "Direct two wire UART Testmode" (DTM) is mandatory. The Direct Test Mode (as defined by the Bluetooth SIG) and BlueMod+S Testmode are part of the BlueMod+S firmware. Please refer to [6] and [7]. For EMC measurements it is recommended to use the BlueMod+S Testmode.

For enabling the different test modes the BlueMod+S provides two IO pins.

- The pin Testmode is low active. Active in the following table means connect to GND.
- The pin Boot0 is high active. Active in the following table means connect to VDD.
- The other two combinations start the bootloader for firmware update of the programmed firmware. These two modes are not scope of this document.

Table 5 shows the possible combinations.

Table 5: Testmode# / Boot0 logic

Testmode#	Boot0	Mode
Active	Inactive	Testmode
Active	Active	DTM
Inactive	Active	Start Bootloader
Inactive	Inactive	Firmware

To enter and use BlueMod+S Testmode or DTM, access to the following signals is required:

- BOOT0
- TESTMODE#
- UART-RXD
- UART-TXD
- UART-RTS#
- UART-CTS#
- GND

These pins shall be routed to some test pads on an outer layer, but can be left open during normal operation when not used.

Please note the UART is required for operation of test modes. During the homologation process, UART-RXD, UART-TXD, UART-RTS# and UART-CTS# must be freely accessible.



4.11. Operating in a Power Switched Environment

A potential "back feeding" problem may arise, if the module is operated in an environment where its power supply (VSUP) is switched off by the application. This might be done to save some power in times Bluetooth is not needed.

As stated in Table 9, the voltage on any I/O pin must not exceed VSUP by more than 0,3V at any time. Otherwise some current I_{INJ} flows through the internal protection diodes. This may damage the module (please refer to chapter 6.1 for limits).

There is no problem if the application circuit design and programming can assure that all signals directed towards BlueMod+S are set to low (U < 0,3V) before and while VSUP is turned off. If this is not guaranteed, at least a series resistor (about 1k) must be inserted into each signal path. This does protect the module but obviously cannot prevent from an unwanted, additional current flow in case of such signal being at high-level. It may be necessary to use driver chips in such appli¬cations, that gate off these signals while VSUP is not present.

4.12. Serial Wire Debug Interface

The Serial Wire Debug (SWD) interface (signals SWDIO, SWCLK) is normally not used in a customer's product. It is reserved for debugging purposes.

Leave SWDIO, SWCLK unconnected. Only if you intend to use them for debugging purposes, make them available. Please be aware of the nRF51822 pin sharing SWDIO/nRESET (refer to [1]). On the BlueMod+S module, pin EXT-RES# is decoupled from SWDIO by a 150 Ω resistor; SWDIO is connected directly to pin SWDIO/nRESET of the nRF51822 chip. Nevertheless, avoid driving EXT-RES# to any logic level while in debug mode, since EXT-RES# will also be driven by the BlueMod+S or the debugger, when SWDIO is driven by either of these.

During any debugging session the external pushbutton reset functionality is not available. Please use the correct reset options of your serial wire debugger. Alternatively, power-off the system, remove the debugger and power-up again (refer to [1], Chapter 10 Debugger Interface (DIF)).



4.13. DC/DC Converter

The product variant BlueMod+S/DC-DC with FW > V2.003 supports a buck DC/DC converter for supplying the radio circuit. Used with a 3V coin-cell battery, the peak current drawn from the battery is reduced by approximately 25%.

The DC/DC converter only works in the supply voltage range $2.1V_{DC}$ to $3.6V_{DC}$, whereas the BlueMod+S/DC-DC is specified to operate in the supply voltage range of $1.8V_{DC}$ to $3.6V_{DC}$. In order to fulfill this requirement the DC/DC converter is switched off automatically by FW if the supply voltage drops below $2.3V_{DC}$ with 5% tolerance. In this situation a LDO regulator will supply the radio circuit. The DC/DC converter is switched on again after a RESET sequence if the supply voltage is $> 2.3V_{DC}.\pm5\%$.

In chapter 6.5 Power Consumption and Power Down Modes the parameters will be given for operation with and without the DC/DC converter enabled.

Switching off the DC/DC converter, when the supply voltage drops below $2.3V_{DC}$, doesn't reduce power efficiency significantly, because the DC/DC conversion factor is close to 1 in this supply voltage region.

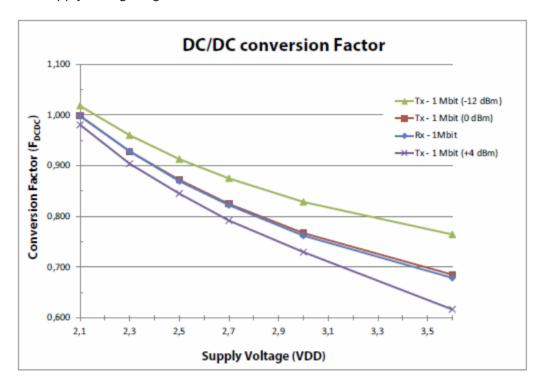


Figure 11: DC/DC conversion factor F_{DCDC} versus supply voltage

The DC/DC conversion factor F_{DCDC} is the ratio between the supply current drawn by the radio circuit with DC/DC enabled versus LDO (DC/DC disabled). $F_{DCDC} = I_{RADIO}(DCDC)/I_{RADIO}(LDO)$.

 F_{DCDC} = 1 means that the DC/DC converter has no effect, whereas F_{DCDC} = 0,7 means 30% less current consumption. If F_{DCDC} becomes > 1, the operation of the DC/DC converter causes more current consumption.

5. MODULE PINS

5.1. Pin Numbering

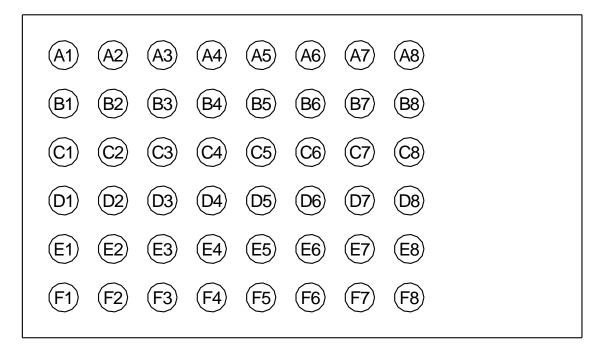


Figure 12: BlueMod+S Pin Numbering Top view



5.2. General Pin Description

Table 6: General pin assignment

Pin Name	Signal	Туре	Act	Function	Alternate Function	Note
E-6	VSUP1	PWR		+3,0V nom.		
F-6	VSUP2	PWR		+3,0V nom		
C-1	not connected			none	May be connected to VSUP	
A-7,E-7,F-7, B-[5,6,7,8], C-[5,6,7,8], D-8,E-8,F-8	GND	PWR		Ground All GND pins must be connected		
A-8	ANT PIN			none	reserved for ext. antenna	(4,9)
B-1	EXT-RES#	I-PU	L	User Reset		
A-6	XL-IN/SLCK	I/O		32,768kHz Slow Clock / XTAL (3)	AIN1	(5)
F-4	UART-TXD	O-PP		Serial Data OUT		(6)
D-2	UART-RXD	1		Serial Data IN		(6)
D-7	UART-RTS#	O-PU (1)	L	Flow Control/IUC		(1,6)
F-3	UART-CTS#	I-PD	L	Flow Control/IUC		(6,8)
B-4	IUR-OUT#	O-PP	L	UICP Control		(8)
D-5	IUR-IN#	I-DIS	L	UICP Control		(8)
D-3	GPIO[0]	I/O		GPIO	I2C-SCL, AIN7, AREF1	(3,5)
B-2	GPIO[1]	I/O		GPIO	I2C-SDA, AIN6	(3,5)
D-1	GPIO[2]	I/O		GPIO	SPI-MOSI	(3,5)
E-4	GPIO[3]	I/O		GPIO		(3,5)
D-4	GPIO[4]	I/O		GPIO		(3,5)
F-2	GPIO[5]	I/O		GPIO	SPI-MISO, AREF0	(3,5)
C-4	GPIO[6]	I/O		GPIO		(3,5)
C-3	GPIO[7]	I/O		GPIO		(3,5)
E-2	GPIO[8]	I/O		GPIO	SPI-SCK, AIN2	(3,5)
A-3	not connected			none		
A-1	GPIO[10]	I/O		GPIO		(3,5)
A-4	not connected			none		
A-2	GPIO[9]	I/O		GPIO		(3,5)
F-1	TESTMODE#	I-PU (7)	L	Testmode Enable	AIN3	(6)
E-1	воото	I-PD (7)		reserved	AIN4	(6)
E-3	SWDIO	I/O-PU		Serial Wire Debug (data)		
D-6	SWCLK	I-PD		Serial Wire Debug (clock)		
C-2	GPIO[13]	I/O		GPIO		(3,5)
B-3	GPIO[11]	I/O		GPIO	AIN5	(3,5)



Pin Name	Signal	Туре	Act	Function	Alternate Function	Note
A-5	XL-OUT	I/O		GPIO / ext. XTAL 32,768kHz	AIN0	(3,5)
F-5	GPIO[14]	I/O		GPIO		(3,5)
E-5	GPIO[12]	I/O		GPIO		(3,5)

Type: PU – pull-up; PD – pull-down; PWR – Power; I – Input; O – Output; I/O – bidir.; OD – open drain; PP – push/pull; RF: RadioFreq; I-DIS – Input Buffer Disconnected

⁽¹⁾ a discrete pull up resistor is used

⁽³⁾ function depends on firmware

⁽⁴⁾ DNU: Do not use, do not connect

⁽⁵⁾ GPIO pin. These pins may be programmed as analog-in, i-disconnected, i-float, i-pu, i-pd, o-pp (output push/pull), o-od (output open drain), o-os (output open source) or some alternate function; refer to [1], [2]

⁽⁶⁾ signal must be accessible for homologation purposes. Refer to 4.10 Test Mode

⁽⁷⁾ signals sampled at startup time. TESTMODE# is I-PU, BOOT0 is I-PD during sampling time only, I-DIS otherwise

⁽⁸⁾ Pin type depends on UICP status. Refer to 4.4.4 Dynamic I/O Signal Type Changes depending on the UICP status

⁽⁹⁾ for compatibility to BlueMod+SR this pin is reserved for an external antenna and must be left open



5.3. Application Specific TIO Pin Configuration

Table 7: Application specific pin assignments, TIO

Pin Name	Signal	TIO Function	Туре	Act	Description	Note
E-6	VSUP1	Power	PWR		+3,3V nom.	
F-6	VSUP2	Power	PWR		+3,3V nom	
C-1	not connected				May be connected to VSUP	
A-7,E-7,F-7, B-[5,6,7,8], C-[5,6,7,8], D-8,E-8,F-8	GND	GND	PWR		Ground All GND pins must be connected	
A-8	ANT PIN	none			leave open (reserved for ext. antenna)	(4,9)
B-1	EXT-RES#	Reset	I-PU	L	User Reset	
A-6	XL-IN/SLCK	SLCK / XTAL	I		32,768kHz Slow Clock (optional)	
F-4	UART-TXD	TXD	O-PP		Serial Data OUT	(6)
D-2	UART-RXD	RXD	I		Serial Data IN	(6)
D-7	UART-RTS#	/RTS	O-PP	L	Flow Control/IUC; refer to [3]	(1,6)
F-3	UART-CTS#	/CTS	I-PD	L	Flow Control/IUC; refer to [3]	(6,8)
B-4	IUR-OUT#	/IUR-OUT	O-PP	L	UICP Control; refer to [3]	(3,8)
D-5	IUR-IN#	/IUR-IN	1	L	UICP Control; refer to [3]	(3,8)
D-3	GPIO[0]	GPIO[0]	I/O		GPIO [I2C-SCL]	(3)
B-2	GPIO[1]	GPIO[1]	I/O		GPIO [I2C-SDA]	(3)
D-1	GPIO[2]	IOC	I/O		GPIO [SPI-MOSI]	(3)
E-4	GPIO[3]	IOB	I/O		GPIO	(3)
D-4	GPIO[4]	HANGUP	I-PD		optional; refer to [5]	
F-2	GPIO[5]	IOD	I/O		GPIO [SPI-MISO]	(3)
C-4	GPIO[6]	reserved	I-DIS		GPIO	(3)
C-3	GPIO[7]	GPIO7	I-DIS		GPIO	(3)
E-2	GPIO[8]	IOA	I/O		GPIO [SPI-SCK] [DEVICE READY#]	(3)
A-3	not connected					
A-1	GPIO[10]	DNU	I-DIS		leave open	(4)
A-4	not connected					
A-2	GPIO[9]	DNU	I-DIS		leave open	(4)
F-1	TESTMODE#	reserved	I-PU	L	connect to test pad	(6,7)
E-1	воото	reserved	I-PD		connect to test pad	(6,7)
E-3	SWDIO	reserved	I/O- PU		leave open (Serial Wire Debug)	
D-6	SWCLK	reserved	I-PD		leave open (Serial Wire Debug)	
C-2	GPIO[13]	DNU	I-DIS		leave open	(4)
B-3	GPIO[11]	DNU	I-DIS		leave open	(4)



Pin Name	Signal	TIO Function	Туре	Act	Description	Note
A-5	XL-OUT	XTAL	I-DIS		leave open if no ext. XTAL is connected	
F-5	GPIO[14]	DNU	I-DIS		leave open	(4)
E-5	GPIO[12]	DNU	I-DIS		leave open	(4)

Type: PU - pull-up; PD - pull-down; PWR - Power; I - Input; O - Output; I/O - bidir.; OD - open drain; PP - push/pull; RF: RadioFreq; I-DIS - Input Buffer Disconnected

⁽¹⁾ a discrete pull up resistor is used

⁽³⁾ function depends on firmware

⁽⁴⁾ DNU: Do not use, do not connect

⁽⁶⁾ signal must be accessible for homologation purposes. Refer to 4.10 Test Mode

⁽⁷⁾ signals sampled at startup time. TESTMODE# is I-PU, BOOT0 is I-PD during sampling time only, I-DIS otherwise

⁽⁸⁾ Pin type depends on UICP status. Refer to 4.4.4 Dynamic I/O Signal Type Changes depending on the UICP status

⁽⁹⁾ for compatibility to BlueMod+SR this pin is reserved for an external antenna and must be left open



5.4. Application Specific ADC Pin Configuration

Table 8: Application specific pin assignments, ADC

Pin Name	Signal	ADC Function	Туре	Act	Description	Note
E-6	VSUP1	Power	PWR		+3,3V nom.	
F-6	VSUP2	Power	PWR		+3,3V nom	
C-1	not connected				May be connected to VSUP	
A-7,E-7,F-7, B-[5,6,7,8], C-[5,6,7,8], D-8,E-8,F-8	GND	GND	PWR		Ground All GND pins must be connected	
A-8	ANT PIN	none			leave open (reserved for ext. antenna)	(4,9)
B-1	EXT-RES#	Reset	I-PU	L	User Reset	
A-6	XL-IN/SLCK	SLCK / XTAL	I		32,768kHz Slow Clock (optional)	
F-4	UART-TXD	TXD	O-PP		Serial Data OUT	(6)
D-2	UART-RXD	RXD	1		Serial Data IN	(6)
D-7	UART-RTS#	/RTS	O-PP	L	Flow Control/IUC; refer to [3]	(1,6)
F-3	UART-CTS#	/CTS	I-PD	L	Flow Control/IUC; refer to [3]	(6,8)
B-4	IUR-OUT#	/IUR-OUT	O-PP	L	UICP Control; refer to [3]	(3,8)
D-5	IUR-IN#	/IUR-IN	1	L	UICP Control; refer to [3]	(3,8)
D-3	GPIO[0]	AREF	Analog		ADC Reference Voltage	(3)
B-2	GPIO[1]	AIN	Analog		ADC Analog Input	(3)
D-1	GPIO[2]	SPI-MOSI	I/O		SPI-MOSI	(3)
E-4	GPIO[3]	CNF_RES#	I-DIS	L	Configuration Restore	(3)
D-4	GPIO[4]	DIO0	I/O		Digital In-/Output 0	(3)
F-2	GPIO[5]	SPI-MISO	I/O		SPI-MISO	(3)
C-4	GPIO[6]	DIO1	I/O		Digital In-/Output 1	(3)
C-3	GPIO[7]	DIO2	I/O		Digital In-/Output 2	(3)
E-2	GPIO[8]	SPI-SCK/IOA	I/O		SPI-SCK / IOA	(3)
A-3	not connected					
A-1	GPIO[10]	OTA-CMD- EN#	I-PU	L	OTA Command Interface Enable	(3,7)
A-4	not connected					
A-2	GPIO[9]	DIO3	I-DIS		Digital In-/Output 3	(3)
F-1	TESTMODE#	reserved	I-PU	L	connect to test pad	(6,7)
E-1	воото	reserved	I-PD		connect to test pad	(6,7)
E-3	SWDIO	reserved	I/O-PU		leave open (Serial Wire Debug)	(4)
D-6	SWCLK	reserved	I-PD		leave open (Serial Wire Debug)	(4)
C-2	GPIO[13]	DIO6	I-DIS		Digital In-/Output 6	(3)
B-3	GPIO[11]	DIO4	I-DIS		Digital In-/Output 4	(3)
A-5	XL-OUT	XTAL	I-DIS		leave open if no ext. XTAL is	



Pin Name	Signal	ADC Function	Туре	Act	Description	Note
					connected	
F-5	GPIO[14]	DIO7	I-DIS		Digital In-/Output 7	(3)
E-5	GPIO[12]	DIO5	I-DIS		Digital In-/Output 5	(3)

Type: PU – pull-up; PD – pull-down; PWR – Power; I – Input; O – Output; I/O – bidir.; OD – open drain; PP – push/pull; RF: RadioFreq; I-DIS – Input Buffer Disconnected

5.5. Handling of Unused Signals

Depending on the application, not all signals of BlueMod+S may be needed. The following list gives some hints how to handle unused signals.

EXT-RES#
 If no external Reset is needed: Leave open

BOOT0 leave open ⁽¹⁾

XL-IN/SLCK
 If no external slow clock is provided: Leave open
 XL-OUT
 If no external XTAL is connected: Leave open

UART-RXD, UART-TXD
 If UART is not used: On UART-RXD, add a pullup (e.g.

100kΩ) to VSUP (1); leave UART-TXD open $^{(1)}$

UART-RTS#, UART-CTS# If neither flow control nor UICP is used, leave open (1)(2)

IUR-OUT#, IUR-IN#
 If UICP is not used, leave open

TESTMODE# Leave open (1)
 unused GPIOs Leave open

SWDIO, SWCLK Leave open. Only needed for debug purposes.

Please note, to keep compatibility with future feature enhancements, unused signals shall not be connected directly to VSUP or GND. Leave open.



Notes:

- (1) Signals must be accessible during the homologation process, refer to 4.10 Test Mode.
- (2) It is strongly recommended to use hardware flow control in both directions. Not using flow control can cause a loss of data.

⁽¹⁾ a discrete pull up resistor is used

⁽³⁾ function depends on firmware

⁽⁴⁾ DNU: Do not use, do not connect

⁽⁶⁾ signal must be accessible for homologation purposes. Refer to 4.10 Test Mode

⁽⁷⁾ signals sampled at startup time. TESTMODE# is I-PU, BOOT0 is I-PD during sampling time only, I-DIS otherwise

⁽⁸⁾ Pin type depends on UICP status. Refer to 4.4.4 Dynamic I/O Signal Type Changes depending on the UICP status

⁽⁹⁾ for compatibility to BlueMod+SR this pin is reserved for an external antenna and must be left open



6. ELECTRICAL CHARACTERISTICS

6.1. Absolute Maximum Ratings

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under "Electrical Requirements" is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

Table 9: Absolute maximum ratings

Item	Symbol	Absolute Maximum Ratings	Unit
Supply voltage	VSUP	-0,3 to +3,6	V
Voltage on any pin V _{Pin}		-0,3 to VSUP+0,3	V
Injected current into any GPIO pin Max. per package	IINJ IINJ_package	40 100	mA mA

6.2. Operating Conditions

 $T_{amb} = 25 \, ^{\circ}C$

Table 10: DC operating conditions

Item Condition			Unit		
		Min	Тур	Max	
Supply voltage VSUP	Normal mode (DC/DC not enabled)	1,8	3,0	3,6	V_{DC}
Supply voltage VSUP	DC/DC mode (DC/DC enabled)	2,1	3,0	3,6	V _{DC}



Firmware version 2.xxx disables the DC/DC converter automatically if $VSUP < 2.3V \pm 5\%$.

6.3. Environmental Requirements

Table 11: Environmental requirements

Item	Symbol	Absolute Maximum Ratings	Unit
Storage temperature range	T _{stg}	-40 to +85	°C
Operating temperature range	Тор	-25 to +75	°C



6.4. DC Parameter

All Module I/O pins are connected directly to the Nordic nRF51822 chip without signal conditioning except for some pull-up/pull-down resistors (as indicated). Therefore the electrical characteristics are as documented in the Nordic nRF51822 data sheet [2].

6.4.1. General Purpose I/O (GPIO)

 $T_{amb} = 25 \, ^{\circ}C$

Table 12: DC characteristics, digital IO

Symbol	Item	Condition		Limit		Unit
			Min	Тур	Max	
VIL	Low-Level Input Voltage	VSUP = 1,8 to 3,6V	VSS	-	VSUP*0,3	V
VIH	High-Level Input Voltage	VSUP = 1,8 to 3,6V	VSUP*0,7	-	VSUP	V
VoL	Low-Level Output Voltage	I _{OL} = 0,5mA ⁽¹⁾ I _{OL} = 5,0mA ^{(2), (3)}	VSS VSS	-	0,3 0,3	V
Vон	High-Level Output Voltage	Iон = -0,5mA ⁽¹⁾ Iон = -5,0mA ^{(2), (3)}	VSUP-0,3 VSUP-0,3	-	VSUP VSUP	V
loL	Low -Level Output Current	V _{OL} ≤ 0,3V	-	-	-0,5mA ⁽¹⁾ -5,0mA ^{(2),}	mA
Іон	High-Level Output Current	VSUP-0,3V ≤ V _{OH} ≤ VSUP	-	-	0,5mA ⁽¹⁾ 5,0mA ^{(2),}	mA
R _{PU}	pull-up resistor		11	13	16	kΩ
R _{PD}	pull-down resistor		11	13	16	kΩ
I _{IC}	I/O pad leakage current		-3,5	0,01	+3,5	nA
Cı	Input Capacitance			2,5		pF

⁽¹⁾ drive = std

⁽²⁾ drive = hi

⁽³⁾ maximal number of pins (per package) with high drive is 3



6.4.2. EXT-RES#

Input EXT-RES# has a Schmitt-Trigger characteristic and an internal pull-up resistor.

 $T_{amb} = 25 \, ^{\circ}C$

Table 13: DC characteristics, EXT-RES#

Symbol	Item	Condition	Limit			Unit
			Min	Тур	Max	
VIL	Low-Level Threshold	VSUP = 1,8 to 3,6V		0,34*VSUP		V
V _{IH}	High-Level Threshold	VSUP = 1,8 to 3,6V		0,62*VSUP		V
V _H YST	Hysteresis	VSUP = 3,0V		800		mV
R _{PU}	pull-up resistor		11	13	16	kΩ
Cı	Input Capacitance			2,5		pF

6.4.3. External Slow Clock SLCK

The following table is applicable if an external slow clock signal is fed into XL-IN/SLCK. This may be a square wave, a clipped sine wave, a sine wave or a rail-to-rail digital signal. Frequency must be 32,768kHz +/-250ppm (refer to 4.9). DC offset is not an issue as long as the input voltage is between VSS and VSUP at all times. Firmware will detect presence of external slow clock signal at startup; signal has to stay active as long as the BlueMod+S is powered.

 $T_{amb} = 25 \, ^{\circ}C$

Table 14: DC characteristics, SLCK

Symbol	Item	Condition	Limit			Unit
			Min	Тур	Max	
V _{SLCKL}	Low-Level Input Voltage	VSUP = 1,8 to 3,6V	0,0	-	VSUP- Vslck	V
Vslckh	High-Level Input Voltage	VSUP = 1,8 to 3,6V	VSUP- V _{SLCK}	-	VSUP	V
V _{SLCK} (1)	Amplitude (peak_peak)	VSUP = 1,8 to 3,6V	0,2	-	VSUP	V
Cı	Input Capacitance			4		pF



6.4.4. Analog Digital Converter (ADC)

6.4.4.1. Input Voltage Range

It is very important to configure the ADC, so the input voltage range and the ADC voltage range are matching.

- If the input voltage range is lower than the ADC voltage range, the resolution will not be fully utilized.
- If the input voltage range is higher than the ADC voltage range, all values above the maximum ADC voltage range will be limited to the maximum value, also called the saturation point.

Input voltage range and saturation point depend on the configured ADC reference voltage (see 6.4.4.2) and the chosen prescaling.

Input Voltage Range = ADC Reference Voltage / Prescaler

Limitation for maximum input voltage is described in 6.4.4.3.

6.4.4.2. ADC Reference Voltage

ADC Reference voltage can be obtained from:

Internal band gap reference: 1,2V ± 1,5%

or

• External reference pin AREF: min. 0,83V $\,$ typ. 1,2V $\,$ max. 1,3V, Source impedance: <5k Ω

6.4.4.3. Analog ADC Input AIN

When the ADC is not sampling the AIN input pin has very high impedance and can be regarded as open circuit.

Table 15 shows the internal impedance for AIN during sampling for different prescaler settings. This impedance has to be taken into account when using additional external voltage dividers.

Table 15: Input impedance for AIN

Prescaler		Impedance R _{AIN}					
	Min	Тур	Max				
1/1	120	130	140	kΩ			
2/3	180	195	210	kΩ			
1/3	365	390	415	kΩ			

Maximum allowed input voltage at AIN (both of the following rules have to be fulfilled):

- The ADC may not be exposed to voltages >2,4V after the AIN prescaler and
- The AIN pin must not be exposed to voltages >VDD + 0,3V



6.5. Power Consumption and Power Down Modes

6.5.1. Terminal I/O Configuration

The following values are typical power consumption values in the different states.

Table 16: Supply current sleep modes, no radio activity

Condition	Note	Slow		Current consumpt	ion	Unit
radio inactive		clock SLCK	BlueMod+S	BlueMod+S/DC-DC FW 1.x (DC/DC off)	BlueMod+S/DC-DC FW 2.x (DC/DC on)	
			I _{Avg}	I _{Avg}	I _{Avg}	
Advertising Off, UICP not active or serial interface up		internal ext. sig. Crystal	1,2 1,1 1,2	1,0 1,0 1,0	1,0 1,0 1,0	mA
Advertising Off, UICP active, serial interface down	(1)	internal ext. sig. Crystal	10 3,5 4	8 3 4	5 3 3	μА
Device in reset	(2)	any	0,625	0,600	0,600	mA
System off	(1,2)		N/A	N/A	0,6	μA

VSUP = 3,0V, T_{amb} = 25°C, all GPIOs open, UART inputs at VSUP or GND, SLCK: 32,768 kHz

The following table shows the average power consumption of BlueMod+S operating in the peripheral device role.

⁽¹⁾ UART-RXD, IUR-IN# and UART-CTS# signals connected to CMOS high level

⁽²⁾ same current consumption w. internal or external slow clock



Table 17: Supply current BLE Terminal I/O profile, peripheral device role

Condition Radio active	Note	Slow clock SLCK	BlueMod	Consumption C BlueMod+S E F		Current Consumption BlueMod+S/DC- DC FW 1.x (DC/DC OFF)		Current Consumption BlueMod+S/DC- DC FW 2.x (DC/DC ON)	
			· ·	r (dBm) ⁽⁸⁾		r (dBm) ⁽⁸⁾		r (dBm) ⁽⁸⁾	
			max (+4)	min (-30)	max (+4)	min (-30)	max (+4)	min (-30)	
Standby, Advertising on 3 channels, advertising interval: 1,28s, UICP not active or serial interface up	(5)	internal ⁽⁷⁾ ext. sig. Crystal	1,2 1,1 1,2	1,2 1,1 1,2	1,0 1,0 1,0	1,0 1,0 1,0	1,0 1,0 1,0	1,0 1,0 1,0	mA
Standby, Advertising on 3 channels, advertising interval: 1,28s, UICP active and serial interface down	(1)	internal ⁽⁷⁾ ext. sig. Crystal	33 26 28	26 20 25	28 24 25	21 17 18	21 20 20	16 15 15	μΑ
Connected, connection interval: 1,28s, UICP not active or serial interface up, no data traffic	(5)	internal ⁽⁷⁾ ext. sig. Crystal	1,1 1,1 1,1	1,1 1,1 1,1	1,0 1,0 1,0	1,0 1,0 1,0	1,0 1,0 1,0	1,0 1,0 1,0	mA
Connected, connection interval: 1,28s, UICP active and serial interface down	(1)	internal ⁽⁷⁾ ext. sig. Crystal	25 20 23	25 19 22	23 18 18	19 14 15	19 17 17	15 13 13	μA
Connected, connection interval: 7,5 ms, no data traffic	(2,3,6)		2,2	1,95	1,9	1,7	1,8	1,6	mA
Connected, connection interval: 7,5 ms, data traffic 115 kbit/s at the serial port, central to peripheral	(2,6,9)		5,2	4,7	4,8	4,3	4,5	4,2	mA
Connected, connection interval: 7,5 ms, data traffic 115 kbit/s at the serial port, peripheral to central	(2,6,9)		3,4	3,2	5,4	4,2	4,6	3,9	mA
Connected, connection interval: 37,5ms, no data traffic	(2,4,6)		1,4	1,4	1,2	1,1	1,1	1,1	mA
Connected, connection interval: 37,5ms, data traffic 115 kbit/s at the serial port, peripheral to central	(2,4,6,		2,0	1,9	2,9	2,5	2,7	2,3	mA

 $VSUP = 3,0V, T_{amb} = 25^{\circ}C, all GPIO lines left open, SLCK: 32,768 kHz$

⁽¹⁾ UART-CTS#, IUR-IN#, UART-RXD driven to CMOS high level, all UART output lines left open

⁽²⁾ connection parameters are setup by the central device when connection is established

⁽³⁾ no data to be transmitted, central device sends an empty packet (80 bit) peripheral device answers (empty packet: 80 bit)

⁽⁴⁾ these are a typical connection parameters used by an iPhone, iPad or iPad mini device in the central device role

⁽⁵⁾ UART-inputs connected to GND or VSUP; UART output lines left open

⁽⁶⁾ same current consumption w. internal or external slow clock

 $^{^{(7)}}$ RC oscillator internal to nRF51822, periodically trimmed by S-device

⁽⁸⁾ TX power as set by AT command

⁽⁹⁾ Effective data throughput lower due to flow control in older FW versions => lower current consumption BlueMod+S



6.6. RF Performance

6.6.1. BLE Receiver

 $VSUP = 1.8V \text{ to } 3.6V, T_{amb} = +20^{\circ}C$

Measured conducted according to BT specification RF-PHY.TS/4.0.1

Receiver	Frequency [GHz]	Min	Тур	Max	BT Spec	Unit
	2,402		-88,5	-70		
Sensitivity at 30,8% PER	2,440		-88,5	-70	≤ -70	dBm
	2,480		-88,5	-70		
Reported PER during PER report integrity test	2,426	50	50	65,4	50 < PER < 65,4	%
Maximum received signal at 3	0,8% PER	-10	0		≥ -10	dBm
	0,030 - 2,000	-30			-30	
Continuous power required	2,000 - 2,400	-35			-35	dBm
to block Bluetooth reception at -67dBm with 0,1% BER	2,500 - 3,000	-35			-35	
,	3,000 - 12,75	-30			-30	
C/I co-channel			10	21	≤21	dB
	$F = F_0 + 1 MHz$		1	15	≤15	dB
	$F = F_0 - 1 MHz$		1	15	≤15	dB
	$F = F_0 + 2 MHz$		-25	-17	≤-17	dB
Adjacent channel Selectivity C/I	F = F ₀ - 2 MHz		-25	-15	≤-15	dB
	$F = F_0 + 3 MHz$		-51	-27	≤-27	dB
	F = F ₀ - 5 MHz		-51	-27	≤-27	dB
	F = F _{image}		-30	-9	≤-9	dB
Maximum level of intermodula	tion interferers	-50	-36		≥-50	dBm

VSUP = 1,8V to 3,6V, $T_{amb} = -25$ °C

Measured conducted according to BT specification RF-PHY.TS/4.0.1

Receiver	Frequency [GHz]	Min	Тур	Max	BT Spec	Unit
	2,402		-88,5	-70	≤ -70	dBm
Sensitivity at 30,8% PER	2,440		-88,5	-70		
	2,480		-88,5	-70		

$VSUP = 1.8V \text{ to } 3.6V, T_{amb} = +75^{\circ}C$

Measured conducted according to BT specification RF-PHY.TS/4.0.1

Receiver	Frequency [GHz]	Min	Тур	Max	BT Spec	Unit
Sensitivity at 30,8% PER	2,402		-88,5	-70	≤ -70	dBm
	2,440		-88,5	-70		
	2,480		-88,5	-70		



6.6.2. BLE Transmitter

 $VSUP = 1.8V \text{ to } 3.6V, T_{amb} = +20^{\circ}C$

Measured conducted according to BT specification RF-PHY.TS/4.0.1

Receiver	Frequency [GHz]	Min	Тур	Max	BT Spec	Unit
	2,402		2,6			
RF transmit power	2,440		3,0		-20 to +10	dBm
	2,480		2,8			
Programmable transmit power range (AT+RFMAXTXPWR)	2,402 – 2,480	-30		+4	N/A	dBm
	$F = F_0 \pm 2MHz$		-42		≤ -30	
ACP	$F = F_0 \pm 3MHz$		-50		≤ -30	dBm
	$F = F_0 \pm > 3MHz$		<-55		≤ -30	
Δf_{1avg} maximum modulation		225	246	275	225 < f _{1avg} < 275	kHz
Δf_{2max} minimum modulation (te	est threshold 185 kHz)	99,9	100		≥ 99,9	%
$\Delta f_{2avg} / \Delta f_{1avg}$		0,8	0,91		≥ 0,8	
Frequency offset		-150	±20	+150	± 150	kHz
Carrier drift rate			9	20	≤ 20	kHz/ 50µs
Carrier drift			16	50	≤ 50	kHz

VSUP = 1,8V to 3,6V, $T_{amb} = -25$ °C

Measured conducted according to BT specification RF-PHY.TS/4.0.1

Receiver	Frequency [GHz]	Min	Тур	Max	BT Spec	Unit
	2,402	-20	3,0	10		
RF transmit power	2,440	-20	3,5	10	-20 to +10	dBm
	2,480	-20	3,1	10		
	$F = F_0 \pm 2MHz$		-37		≤ -30	
ACP	$F = F_0 \pm 3MHz$		-46		≤ -30	dBm
	$F = F_0 \pm > 3MHz$		<-51		≤ -30	
Frequency Offset		-150	±35	+150	± 150	kHz
Carrier drift rate			10	20	≤ 20	kHz/ 50µs
Carrier drift			20	50	≤ 50	kHz

VSUP = 1,8V to 3,6V, T_{amb} = +75°C Measured conducted according to BT specification RF-PHY.TS/4.0.1

Receiver	Frequency [GHz]	Min	Тур	Max	BT Spec	Unit
	2,402	-20	1,5	10		
RF transmit power	2,440	-20	1,9	10	-20 to +10	dBm
	2,480	-20	1,7	10		
	$F = F_0 \pm 2MHz$		-42	-20	≤ -30	
ACP	$F = F_0 \pm 3MHz$		-50	-40	≤ -30	dBm
	$F = F_0 \pm > 3MHz$		<-53	-30	≤ -30	
Frequency Offset		-150	±35	±35	± 150	kHz
Carrier drift rate			10	10	≤ 20	kHz/ 50µs
Carrier drift			20	20	≤ 50	kHz

6.6.3. Antenna Gain and Radiation Pattern

If BlueMod+S/AI is integrated into an end product while the recommendations depicted in 7.4 Placement Recommendation are maintained, the following typical antenna radiation patterns can be expected.

Radiation Pattern will depend on the end products PCB size, masses in the antenna environment, housing material and geometrics. Typical antenna gain is about +2dBi.

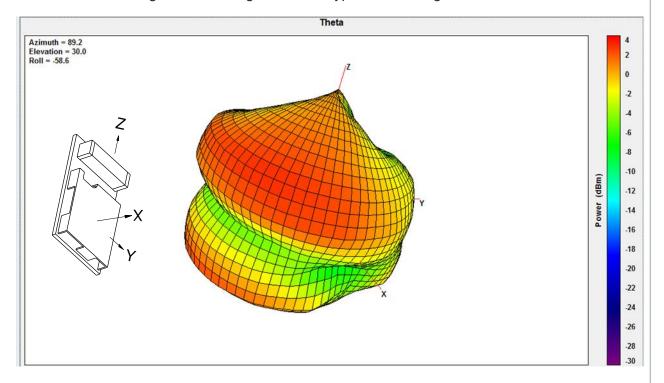


Figure 13: Typical antenna radiation pattern at 2402MHz



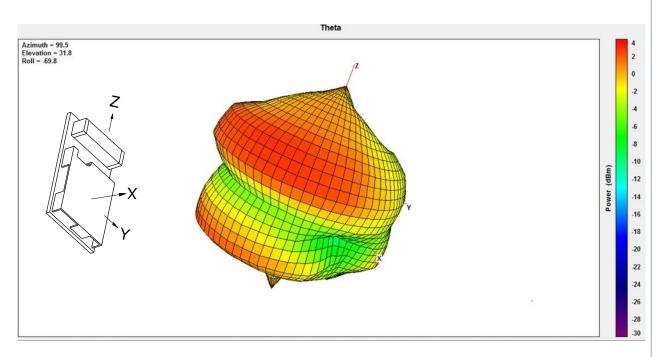


Figure 14: Typical antenna radiation pattern at 2441MHz

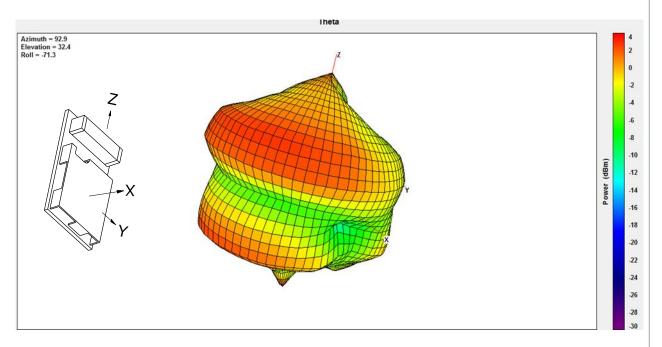


Figure 15: Typical antenna radiation pattern at 2480MHz



6.7. Power-Up Time

The time until the BlueMod+S is able to accept link requests or serial data depends on the firmware version and on the source for the slow clock. Using TIO firmware version V1.009, the device is ready (as indicated by GPIO IOA, measured from the release of EXT_RES# or VSUP rising above 1,8V) as follows:

- t_{DeviceReady} 0,7s (typ.) if an external slow clock signal is provided.
- t_{DeviceReady} 0,9s (typ.) if an external 32,768kHz crystal is connected.
- t_{DeviceReady} 1,7s (typ.) if no external signal is provided so the internal RC is used.




For further information refer to the document BlueMod+S Startup Timing.



7. MECHANICAL CHARACTERISTICS

7.1. Dimensions



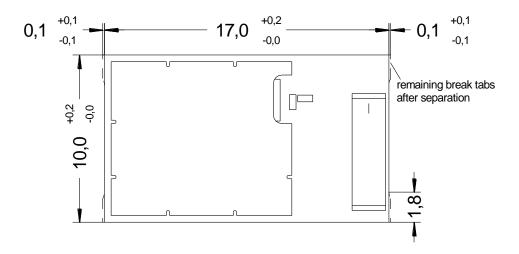


Figure 16: BlueMod+S/AI dimensions

7.2. Recommended Land Pattern

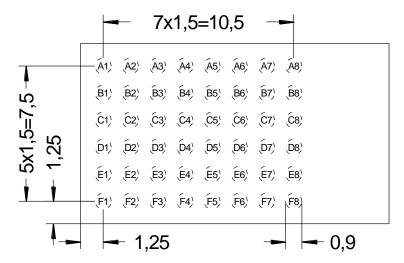


Figure 17: BlueMod+S land pattern TOP VIEW



All dimensions are in mm.



7.3. Re-flow Temperature Time Profile

The data here is given only for guidance on solder and has to be adapted to your process and other re-flow parameters for example the used solder paste. The paste manufacturer provides a re-flow profile recommendation for his product.

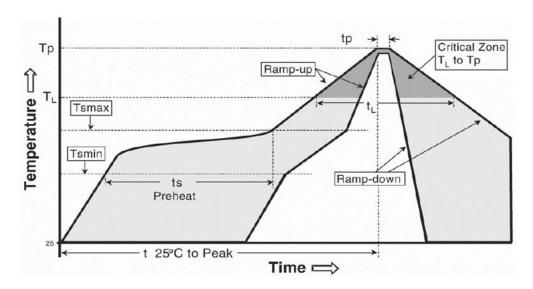


Figure 18: Soldering temperature time profile (for reflow soldering)

Preheat		Main Heat		Peak	
tsmax		tLmax		tpmax	
Temperature	Time	Temperature	Time	Temperature	Time
[°C]	[sec]	[°C]	[sec]	[°C]	[sec]
150	100	217	90	260	10
		230	50		
Average ramp-up rate		[°C / sec]	3		
Average ramp-down rate		[°C / sec]	6		
Max. Time 25°C to Peak Temperature		[min.]	8		

Opposite side re-flow is prohibited due to module weight.

Devices will withstand the specified profile and will withstand up to 1 re-flows to a maximum temperature of 260°C. The reflow soldering profile may only be applied if the BlueMod+S resides on the PCB side looking up. Heat above the solder eutectic point while the BlueMod+S is mounted facing down may damage the module permanently.



7.4. Placement Recommendation

To achieve best radio performance for BlueMod+S/AI, it is recommended to use the placement shown in Figure 19. This is a "corner placement" meaning the BlueMod+S/AI is placed such that the antenna comes close to the corner of the application PCB (red area). So, the yellow area is outside the PCB and regards to the housing, too (refer to 7.5).

Please note that for best possible performance the antenna should be directed away from the application PCB as shown in Figure 19.

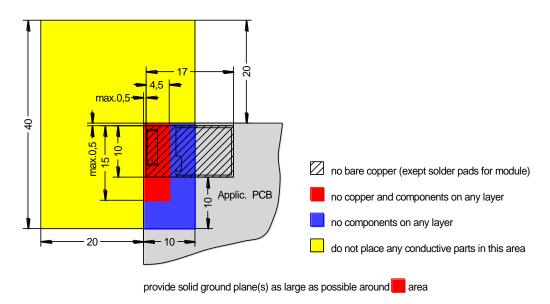


Figure 19: BlueMod+S/AI placement recommendations

7.5. Housing Guidelines

The individual case must be checked to decide whether a specific housing is suitable for the use of the internal antenna. A plastic housing must at least fulfill the following requirements:

- Non-conductive material, non-RF-blocking plastics
- No metallic coating
- ABS is suggested

7.6. Antenna Issues

BlueMod+S/Al comprises a ceramic antenna which as a component is soldered to the circuit board. This solution is functional for a BlueMod+S/Al integrated into a plastic housing.

The performance of the antenna has to be checked within the final integration environment. Adjacent PCBs, components, cables, housings etc. could otherwise influence the radiation pattern or be influenced by the radio wave energy. It must be ensured that the antenna is not co-located or operating in conjunction with any other antennas, transmitters, cables or connectors.



7.7. Safety Guidelines

According to SAR regulation EN 62479:2010 the BlueMod+S is not intended to be used in close proximity to the human body. Please refer to above-mentioned regulation for more specific information.

In respect to the safety regulation EN60950-1: 2006 + A11: 2009 + A1: 2010 + AC: 2011 all conductive parts of the BlueMod+S are to be classified as SELV circuitry. OEM's implementing the BlueMod+S in their products should follow the isolation rules given in regulation EN 60950-1: 2006.

The PCB material of the BlueMod+S is classified UL-94V0.

7.8. Cleaning


In general, cleaning the modules mounted on the host board is strongly discouraged. Residues between module and host board cannot be easily removed with any cleaning method.

- Cleaning with water or any organic solvent can lead to capillary effects where the
 cleaning solvent is absorbed into the gap between the module and the host board.
 The combination of soldering flux residues and encapsulated solvent could lead to
 short circuits between conductive parts. The solvent could also damage any labels.
- Ultrasonic cleaning could damage the module permanently. Especially for crystal oscillators the risk of damaging is very high.



8. APPLICATION DIAGRAM

The following schematic shows a typical application of BlueMod+S. The module is connected to some MCU running the application layer. MCU and BlueMod+S use the same 3,3V power supply. The serial interface has RTS/CTS flow control and UICP support in this example. The optional hangup feature to close down the link is provided. As an option to save power, there is an external slow clock oscillator. All other module pins may be left unconnected.

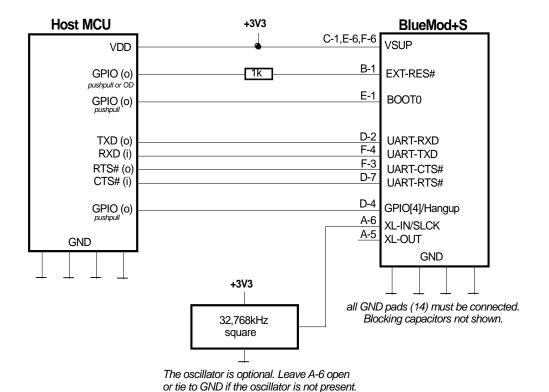

In this example BlueMod+S is connected to an MCU supporting RTS/CTS flow control and Hangup. Firmware update is supported (BOOT0, EXT-RES# connected).

The slow clock oscillator (32,768kHz) is optional; it helps to save power during power down states.

Figure 20: Typical application schematics



9. APPROVALS/CERTIFICATIONS

The BlueMod+S/AI has been tested to comply to the appropriate EU, FCC, IC and KCC directives.

CE testing is intended for end products only. Therefore CE testing is not mandatory for a Bluetooth Module sold to OEM's. However Telit provides CE tested modules for customers in order to ease CE compliance assessment of end products and to minimize test effort.

9.1. Declaration of Conformity CE

The BlueMod+S/AI fully complies with the essential requirements of the following EU directives:

- RED 2014/53/EU
- RoHS 2011/65/EC

The actual version of EU Declaration of Conformity (EU DoC) can be downloaded from

http://www.telit.com/RED

9.2. FCC Compliance

The BlueMod+S/AI has been tested to fulfill the FCC requirements. Test reports are available on request. Grants of the Full Modular Approval is shown below.



FCC Grant 9.2.1.

TCB

GRANT OF EQUIPMENT AUTHORIZATION

Certification

Issued Under the Authority of the Federal Communications Commission

Ву:

MET Laboratories, Inc. 914 W. Patapsco Avenue Baltimore, MD 21230-3432 Date of Grant: 03/14/2014

Application Dated: 03/14/2014

Telit Wireless Solutions GmbH Mendelssohnstrasse 15 Hamburg, 22761 Germany

Attention: Jens Jensen

NOT TRANSFERABLE

EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.

FCC IDENTIFIER:

RFRMS

Name of Grantee: Telit Wireless Solutions GmbH

Equipment Class: Digital Transmission System

Notes: Modular Type:

15C

Bluetooth LE module Single Modular

Grant Notes

FCC Rule Parts

Frequency Range (MHZ) 2402.0 - 2480.0

Output Watts 0.0025 Frequency Tolerance

Emission Designator

Output power listed is conducted. Modular approval. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. OEMs and installers must be provided with antenna installation and transmitter operating conditions for satisfying RF exposure compliance.

9.2.2. **FCC Statement**

This device complies with 47 CFR Part 2 and Part 15 of the FCC Rules and with.

Operation is subject to the following two conditions:

- (1) This device my not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



9.2.3. FCC Caution

A

Warning:

Changes or modifications made to this equipment not expressly approved by Telit may void the FCC authorization to operate this equipment.

9.2.4. FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

9.2.5. FCC RF-exposure Statement

The BlueMod+S/AI complies with the FCC/IC RF radiation exposure limits set forth for an uncontrolled environment.

The output power is < 10mW EIRP and therefore according to "FCC KDB 447498 D01 General RF Exposure Guidance v05" Appendix A, table "SAR Exclusion Threshold", excluded from SAR testing for test separation distances ≥ 5mm and if it is not used in colocations with other antennas. If the product implementing the BlueMod+S/AI has other antennas in co-location or separation distances < 5mm an FCC TCB should be asked for a Class II Permissive Change.

9.2.6. FCC Labeling Requirements for the End Product

Any end product integrating the BlueMod+S/AI must be labeled with at least the following information:

This device contains transmitter with

FCC ID: RFRMS
IC: 4957A-MS



9.3. IC Compliance

The BlueMod+S/AI has been tested to fulfill the IC requirements. Test reports RSS-210 of Industry Canada are available on request. Grant of the Full Modular Approval is shown below.

9.3.1. IC Grant

GRANT OF EQUIPMENT CERTIFICATION

THE FOLLOWING EQUIPMENT HAS BEEN TESTED AND CERTIFIED UNDER INDUSTRY CANADA RSS-210, ISSUE 8 DEC. 2010 RSS-GEN, ISSUE 3, DECEMBER 2010

 $\mathbb{C}\mathbf{B}$

Issued By:

CB

MET Laboratories, Inc.

914 W. Patapsco Avenue Baltimore, Maryland 21230 Laboratory Number: 2043A

Equipment Certification is hereby issued to the Identified Certificate Holder and is VALID ONLY for the equipment identified herein.

La certification du matériel est distribuée à la Société identifiée et est VALIDE SEULEMENT pour l'équipment identifié ci-dessous.

NOT TRANSFERABLE / PAS TRANSMISSIBLE

FILE/CERTIFICATE NUMBER: 412-3-2014-41461

CERTIFICATION NUMBER: IC: 4957A-MS

Issued to/Délivré a: Telit Wireless Solutions GmbH Date Issued: 3/14/2014

Address: Mendelssohnstrasse 15 D

Hamburg, Germany D - 22761

Nature of Application/Nature d'Application: Original

Equipment Description/Genre de Matériel: Bluetooth LE module

Type of Radio Equipment: Low Power Device (2400 – 2483.5 MHz); Modular Approval; Spread

Spectrum/Digital Device (2400-2483.5 MHz)

Equipment Category/Catégorie de Matériel: Category I

Model Number(s)/Modele BlueMod+S

Conducted RF Power or Field Strength/Puissance H.F.:

6.0025 W
Frequency Range/Bande de Fréquences:

2402 – 2480 MHz
Bandwidth(s)/ largeurs de bande:

1082.3 kHz
Emission Designations/Genre D'Émission:

F1D

Antenna Information/l'information d'antenne: Integral chip antenna

Test Lab: Shenzhen MORLAB Communication Technologies Co. Ltd., Fl. 3, Bldg A, FeiYang Science Park, Block 67, BoaAn

District, Shenzhen, 518101 P.R. China

Tel: +86 755 36698555; Fax: +86 755 36698614

Test Lab IC Site Number: IC: 7183A-2

Notes: Output power listed is conducted. Modular approval. The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. OEMs and installers must be provided with antenna installation and transmitter operating conditions for satisfying RF exposure compliance.

Certification of equipment means only that the equipment has met the requirements of the above-noted specification. Licence applications, where applicable to use certified equipment, are acted on accordingly by the Industry Canada issuing office and will depend on the existing radio environment, service and location of operation. This certificate is issued on condition that the holder complies and will continue to comply with the requirements and procedures issued by Industry Canada. The equipment for which this certificate is issued shall not be manufactured, imported, distributed, leased, offered for sale or sold unless the equipment complies with the applicable technical specifications and procedures issued by Industry Canada.

La certification du matériel signifie seulement que le matériel a satisfait aux exigences de la norme indiquée ci-dessus. Les demandes de licences nécessaires pour l'utilisation du matériel certifié sont traitées en conséquence par le bureau de délivrance d'Industrie Canada et dépendent des conditions radio ambiantes, du service et de l'emplacement d'exploitation. Le présent certificat est délivré à la condition que le titulaire satisfaise et continue de satisfaire aux exigences et aux procédures d'Industrie Canada. Le matériel à l'égard duquel le présent certificat est délivré ne doit pas être fabriqué, importé, distribué, loué, mis en vente ou vendu à moins d'être conforme aux procédures et aux spécifications techniques applicables publiées par Industrie Canada.

I hereby attest that the subject equipment was tested and found in compliance with the above-noted specification.

J'atteste par la présente que le matériel a fait l'objet d'essai et jugé conforme à la spécification ci-dessus.

Authorized MET Representative Signature:

Printed: 3/13/2014

Shawn McMillen



9.3.2. IC Statement

- (i) Ce dispositif doit être installé et exploité dans une enceinte entièrement fermée afin de prévenir les rayonnements RF qui pourraient autrement perturber la navigation aéronautique. L'installation doit être effectuée par des installateurs qualifiés, en pleine conformité avec les instructions du fabricant.
- (ii) Ce dispositif ne peut être exploité qu'en régime de non-brouillage et de non-protection, c'est-à-dire que l'utilisateur doit accepter que des radars de haute puissance de la même bande de fréquences puissent brouiller ce dispositif ou même l'endommager. D'autre part, les capteurs de niveau à propos desquels il est démontré qu'ils perturbent une exploitation autorisée par licence de fonctionnement principal doivent être enlevés aux frais de leur utilisateur.

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

9.3.3. IC Caution



Warning:

Changes or modifications made to this equipment not expressly approved by Telit may void the IC authorization to operate this equipment.

9.3.4. IC RF-exposure Statement

This equipment is portable device. The output power of this device is less than 20mW. The SAR test is not required.

9.3.5. IC Labeling Requirements for the End Product

Any end product integrating the BlueMod+S/AI must be labeled with at least the following information:

This device contains transmitter with

FCC ID: RFRMS IC-ID: 4957A-MS



9.3.6. IC Label Information BlueMod+S

Model: BlueMod+S

The IC-ID is: 4957A-MS



9.4. KC Certification

The BlueMod+S/AI has been certified in Korea under the Clause 2, Article 58-2 of Radio Waves Act. Certificate is shown below with MSIP-CRM-Rfr-BlueModS.

9.4.1. KC Certificate

6BE-6B07-3BE8-24D5	
	방송통신기자재등의 적합인증서
Certific	ate of Broadcasting and Communication Equipments
상호 또는 성명 Truck Niene or Applicant	Telit Wireless Solutions GmbH
기자제 명칭 Equipment Name	특정소출력 무선기기(무선데이터통신시스템용 무선기기)
기본모델명 Basic Model Number	BlueMod+S
파생모델명 Series Model Number	
인증번호 Certification No.	MSIP-CRM-Rfr-BlueModS
제조자/제조국가 Manufacturer/ Country of Origin	Telit Wireless Solutions GmbH / 독일
인증연월일 Date of Certification	2014-05-29
기타	

위 기자재는「전파법」제58조의2 제2항에 따라 인증되었음을 증명합니다.

It is verified that foregoing equipment has been certificated under the Clause 2, Article 58-2 of Radio Waves Act.

2016년(Year) 06월(Month) 07일(Date)





Director General of National Radio Research Agency

표 인증 받은 방송통신기자계는 반드시 "**직합성평가표시**" 를 부착하여 유통하여야 합니다. 위반시 파테료 처분 및 인증이 취소된 수 있습니다.

9.5. MIC Certification

The BlueMod+S/AI has been tested to fulfill the Japanese MIC requirements.



Please note that the Japanese Certificates are only valid for the variants using the internal ceramic antenna, denoted by the string "Al" in the product name.

Japanese Radio Law

日本の電気通信事業法と電気通信事業法の基準

This device is granted pursuant to the Japanese Radio Law (電波法)

本製品は、電波法と電気通信事業法に基づく適合証明を受けております。

This device should not be modified (otherwise the granted designation number will become invalid)

本製品の改造は禁止されています。(適合証明番号などが無効となります。)



9.5.1. **MIC Certificates**

CTC advanced GmbH

Untertürkheimer Strasse 6-10, D-66117 Saarbrücken, Germany



Conformity Assessment Body Recognized Certification Body for Japan

認証書 TYPE - BASED CERTIFICATE

Approval Holder

Telit Wireless Solutions GmbH

認証を受けた者

Mendelssohnstr. 15d 22761 Hamburg Germany

Manufacturer Name

Telit Wireless Solutions GmbH

製造者名

Mendelssohnstr. 15d 22761 Hamburg

Germany

Model Name 型式又は名称 BlueMod+S

Module approval

Each addition Host-equipment may not

cause harmful interference!

Classification of Specified

Radio equipment 特定無線設備の種類 Ordinance concerning Technical Regulations Conformity Certification etc. of Specified Radio Equipment

特定無線設備の技術基準適合証明等に関する規則

Article 2, clause 1, Item 19

Low Power data communication system in the 2.4GHz band

Type of Emissions, Frequency and Antenna Power

電波の形式、周波数 及び空中線電力

2402 ~ 2480MHz (2MHz separation, 40 channels)

0.0014W

Certified Number

認証番号

202-LSE136

Certified Date

2016-12-16

認証をした年 月 日

上記のとおり、電波法第38条の24第1項の規定に基づく認証を行ったものであることを証する。 This is to certify that the above-mentioned certification by type has been granted in accordance with the provisions of Article 38-24, Paragraph 1 of the Radio Law.

Recognized by The Ministry of Internal Affairs and Communications (MIC)

CTC advanced GmbH **Lothar Spitzer**

Signature

Mulgw

Bundesnetzagentur

BNetzA-CAB-03/25-51/5



9.6. Anatel Certification

The BlueMod+S/AI has been certified in Brazil by Anatel.





9.7. Australian RCM Mark

Telit is registered supplier at ACN with the following ABN:

Name: TELIT WIRELESS SOLUTIONS (AUSTRALIA) PTY LIMITED

ACN: 155 224 123

ABN: 16 155 224 123

Registration date: 19/01/2012 Next review date: 19/01/2018

Status: Registered

Type: Australian Proprietary Company, Limited By Shares

Locality of registered office: CHATSWOOD NSW 2067

Regulator: Australian Securities & Investments Commission



View Summary (PDF)

A SDoC for the BlueMod+S has been issued and is available on request.



9.8. Bluetooth Qualification

The BlueMod+S is a qualified design according to the Bluetooth Qualification Program Reference Document (PRD) V2.3.

The Declaration ID is: D023133

The Qualified Design ID is: 57830

For further information about marking requirements of your product attention should be paid the Bluetooth Brand Usage Guide at

https://www.bluetooth.org/en-us/bluetooth-brand/bluetooth-brand

According to the Bluetooth SIG rules (Bluetooth Declaration Process Document - DPD) you must complete a Product Listing and Declaration of Compliance (DoC) referencing the Qualified Design (QDID) for your product. For further information see www.bluetooth.org or contact Telit.

QDL Bluetooth® Qualified Design Listing

The Bluetooth SIG Hereby Recognizes

Stollmann E+V GmbH

Member Company

BlueMod+S

Qualified Design Name

Declaration ID: D023133

Qualified Design ID: 57830

Specification Name: 4.1

Product Type: End Product

Model Number: BlueMod+S

Listing Date: 05 June 2014

Hardware Version Number: V1

This certificate acknowledges the *Bluetooth*[®] Specifications declared by the member were achieved in accordance with the *Bluetooth* Qualification Process as specified within the *Bluetooth* Specifications and as required within the current PRD

Assessment Date: 05 June 2014

Software Version Number: V1

Bluetooth®



9.9. RoHS Declaration

The BlueMod+S/AI fully complies with EU RoHS directive.

RoHS 2011/65/EC

The actual version of RoHS Declaration of Conformity (EU DoC) can be downloaded from the Telit Download Zone:

http://www.telit.com/download-zone/

Take note that you have to register to get access to the Download Zone.




10. PACKING

The BlueMod+S modules are packed either as Tape&Reel or as tray packing.

10.1. Tape&Reel Packing


The BlueMod+S modules are packed using carrier tape in this orientation

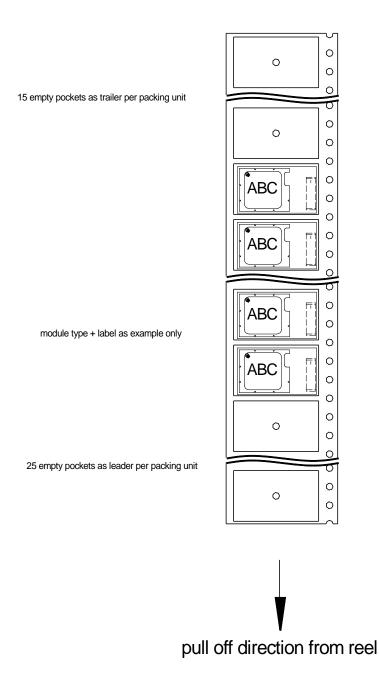




10.1.1. Tape

The dimensions of the tape are shown in the drawing below (values in mm):

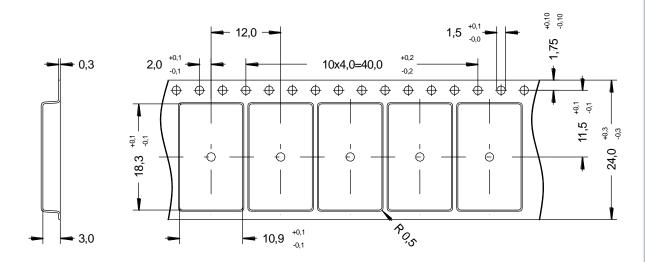


10.1.2. Reel

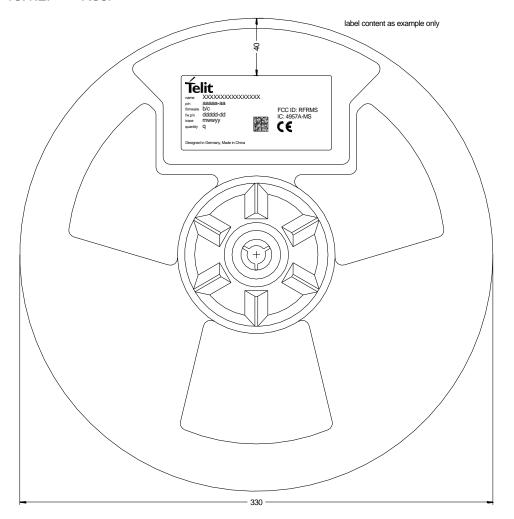




10.2. Tray Packing

10.2.1. Module Orientation

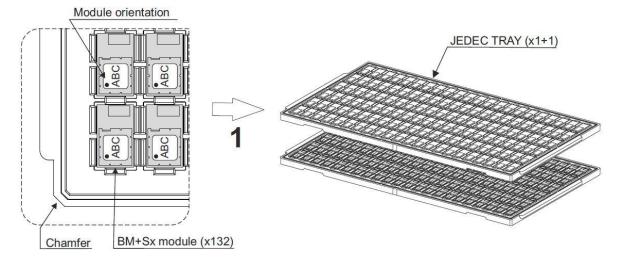

10.2.2. Tray Dimension

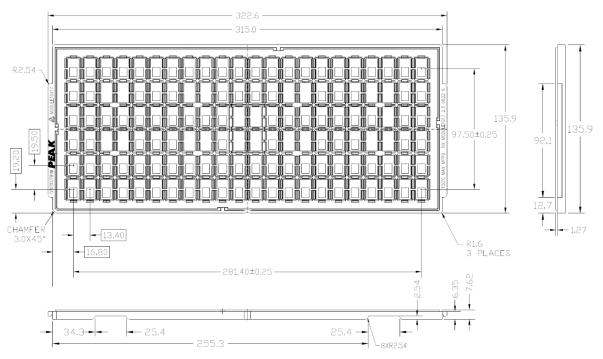

10.3. Moisture Sensitivity Level

Moisture Sensitivity Level (MSL) for BlueMod+S is 3.



11. EVALUATION KIT

The kit BlueEva+S is available to evaluate functionality and start your firmware implementation.



12. SAFETY RECOMMENDATIONS

12.1. READ CAREFULLY

Be sure the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and has to be avoided in the following areas:

- Where it can interfere with other electronic devices in environments such as hospitals, airports, aircrafts, etc.
- Where there is risk of explosion such as gasoline stations, oil refineries, etc. It is the
 responsibility of the user to enforce the country regulation and the specific
 environment regulation.

Do not disassemble the product; any mark of tampering will compromise the warranty validity. We recommend following the instructions of the hardware user guides for correct wiring of the product. The product has to be supplied with a stabilized voltage source and the wiring has to be conformed to the security and fire prevention regulations. The product has to be handled with care, avoiding any contact with the pins because electrostatic discharges may damage the product itself.

The system integrator is responsible for the functioning of the final product; therefore, care has to be taken to the external components of the module, as well as any project or installation issue, because the risk of disturbing the GSM network or external devices or having impact on the security. Should there be any doubt, please refer to the technical documentation and the regulations in force. Every module has to be equipped with a proper antenna with specific characteristics. The antenna has to be installed with care in order to avoid any interference with other electronic devices and has to guarantee a minimum distance from the body (20 cm). In case this requirement cannot be satisfied, the system integrator has to assess the final product against the SAR regulation.

The European Community provides some Directives for the electronic equipment introduced on the market. All of the relevant information is available on the European Community website:

http://ec.europa.eu/enterprise/sectors/rtte/documents/

The text of the Directive 99/05 regarding telecommunication equipment is available, while the applicable Directives (Low Voltage and EMC) are available at:

http://ec.europa.eu/enterprise/sectors/electrical/



13. DOCUMENT HISTORY

Revision	Date	Changes
01	2014-03-03	First issue
02	2014-08-29	Chapter Antenna-Gain and Radiation Pattern, added pattern Chapter Power-Up Time revised
		Chapter Serial Interface, added 5-wire minimum UICP scheme
		Chapter 4-Wire Serial Interface, revised and renamed
		Chapter UART Example Circuits, added title
		Chapter Handling of Unused Signals updated
		Table General Pin Assignment, updated and reformatted
		Table Application Specific Pin Assignments, TIO updated and reformatted
		Table Supply Current BLE Terminal I/O Profile, Peripheral Device Role: - Standby current (UICP,down, external slow clock signal) corrected Added measurements for connected state
		Figure Typical Application Schematics, DSR#, DTR# at host side corrected
		Chapter FCC Grant added
		Chapter IC Grant added
		Chapter KCC Certification added
		Chapter Bluetooth Qualification updated
		Chapter Package Label updated to version with KCC ID and logo
03	2015-07-15	Chapter Introduction, versions and variants overview added
		Power-up Slew-Rate, Parameter changed according to Nordic PCN92
		BLE Transmitter Transmit Power Specification detailed
		Operating Conditions Supply range with DCDC ON added
		Chapter Cleaning added
		Chapter DC/DC Converter added
		Cover Sheet photo updated to new label
		Chapter Power Consumption and Power-Down Modes reworked
		Chapter 4-Wire Serial Interface, attention "UICP has to be deactivated" added



Revision	Date	Changes
		Chapter Pin Description, UICP influence on Signal type note added Chapter Dimension, new drawing with label Chapter Part Numbers updated
04	2016-01-22	Feature Summary updated (BT4.1, KCC) Added rules for selection of coin cell capacitor Recommended output capacitor of LDO changed to 1uF Chapter Testmode renamed, Testmode#/Boot0 logic added ADC Pin Configuration added Analog Digital Converter (ADC) added Part Numbers, BlueMod+S/AI/ADC added
05	2016-05-23	Telit cover page added
06	2016-12-15	Chapter MSL added Figure module height changed to worst case values Adjusted download link in introduction
7	2017-04-12	Chapter Declaration of Conformity CE updated, note RED pending added Chapter MIC Certification added Chapter RoHS Declaration revised, Status pending Chapter KC Certificate updated to Telit version Chapter FCC Grant updated to Telit version Chapter IC Grant updated to Telit version Chapter Anatel Certification added Chapter Australian RCM Mark added Chapter IC Label Information BlueMod+S updated Chapter Pin Numbering Pin C-1 may be connected to VSUP Chapter Packing, new drawings for Tape&Reel, tray packing introduced Chapter Ordering Information deleted
8	2017-06-07	Chapter Declaration of Conformity CE updated Chapter Anatel Certification updated Chapter RoHS updated Chapter Test Mode recommendation added

SUPPORT INQUIRIES

Link to www.telit.com and contact our technical support team for any questions related to technical issues.

www.telit.com



Telit Communications S.p.A. Via Stazione di Prosecco, 5/B I-34010 Sgonico (Trieste), Italy

Telit IoT Platforms LLC 5300 Broken Sound Blvd, Suite 150 Boca Raton, FL 33487, USA Telit Wireless Solutions Inc. 3131 RDU Center Drive, Suite 135 Morrisville, NC 27560, USA

Telit Wireless Solutions Co., Ltd. 8th Fl., Shinyoung Securities Bld. 6, Gukjegeumyung-ro8-gil, Yeongdeungpo-gu Seoul, 150-884, Korea Telit Wireless Solutions Ltd. 10 Habarzel St. Tel Aviv 69710, Israel

Telit Wireless Solutions Technologia e Servicos Ltda Avenida Paulista, 1776, Room 10.C 01310-921 São Paulo, Brazil

Telit reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. The information contained herein is provided "as is". No warranty of any kind, either express or implied, is made in relation to the accuracy, reliability, fitness for a particular purpose or content of this document. This document may be revised by Telit at any time. For most recent documents, please visit www.telit.com

Copyright © 2016, Telit